
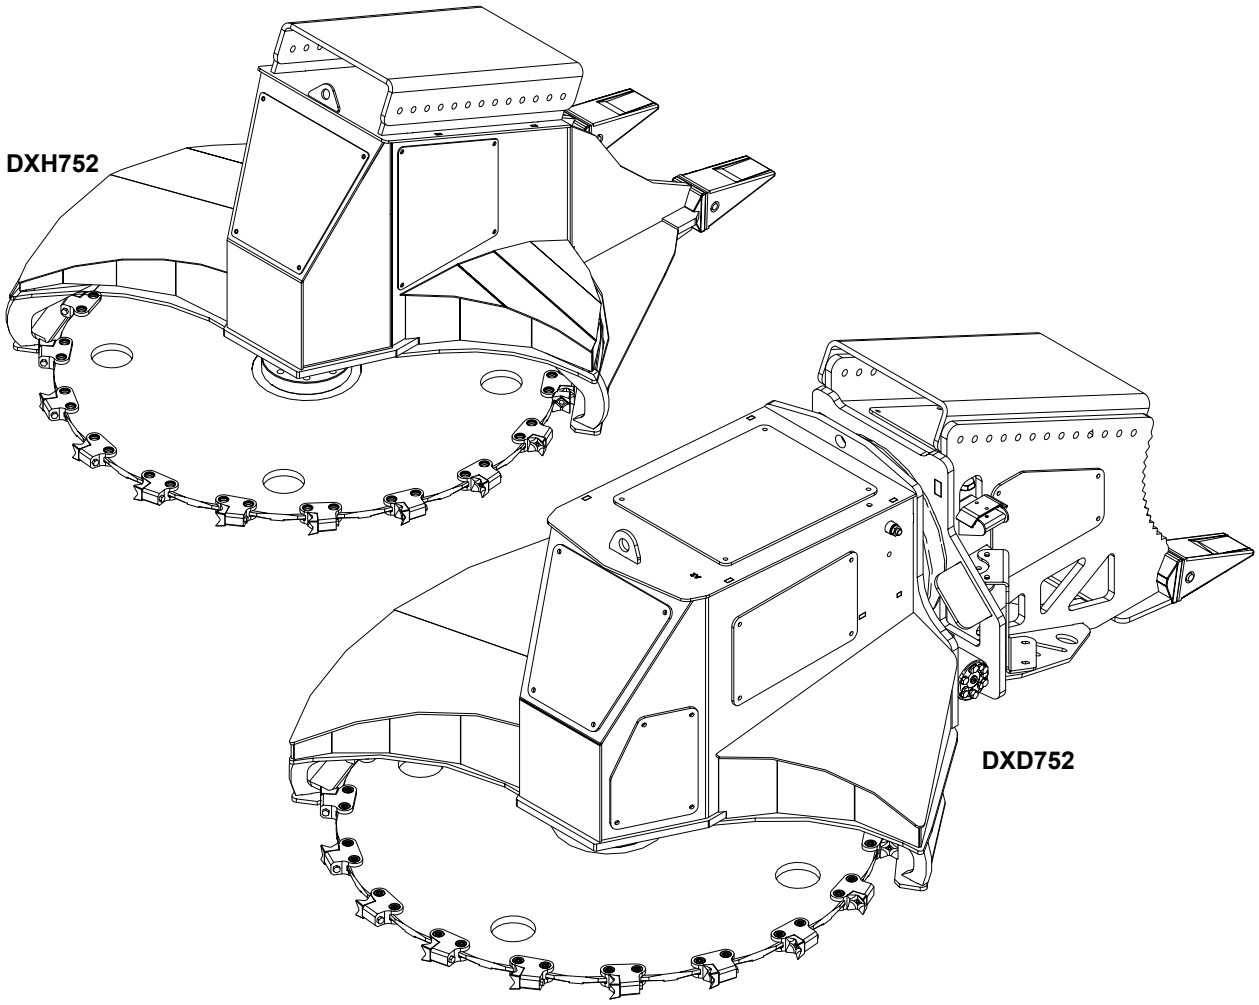


BAUMALIGHT™

DXD752 And DXH752 Tree Saw

OPERATOR'S MANUAL

Issue Date: October 2026

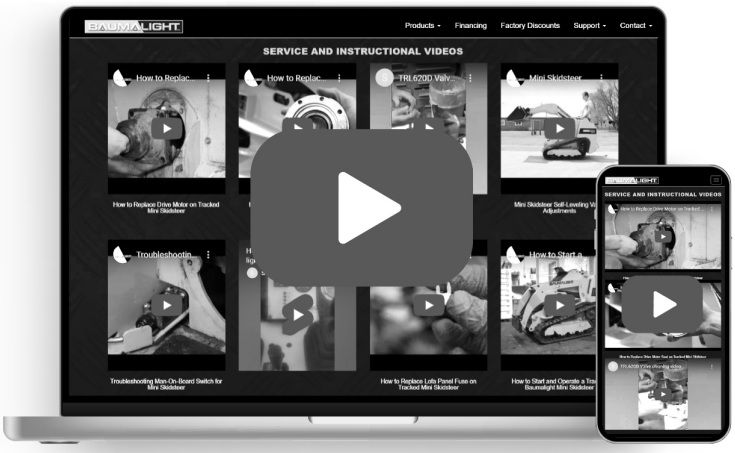

Service And Instructional Videos

Find online at baumalight.com/support

Following is a list of videos and documents available on Baumalights website and also on YouTube to help and enhance maintaining the tree saw. The list below was current at the time this manual was issued. Additional content may be available.

Activity ID Number	Activity Name	Description	Item Available
320	Hydraulic Motor.	Breaking In Replacement Hydraulic Motor.	Video
207	Replacing Teeth.	When To Replace B8000 Teeth.	Video
105	Remove Seal.	Remove Seal On Motor Or Load Adapter.	Video
124	Zero-Leak Relief Valve.	Demonstrating And Troubleshooting Zero-Leak.	Video
143	Replace Motor Shaft Seal.	Replace Shaft Seal On Piston Motor.	Video
478	Communicating Measurements.	Why Not To Send Pictures Of Measuring Tapes To Communicate Measurements.	Video

TABLE OF CONTENTS

1 INTRODUCTION 4
1.1 Overview 4
1.2 Intended Use And Foreseeable Misuse 4
2 SAFETY 5
2.1 Safety Alert Symbol And Safety Words 5
2.2 Operational Hazards 5
Prepare For Emergencies 6
Replace Safety Signs 6
Do Not Allow Riders 6
Lower Operating Speed 6
Avoid Rollover 7
Avoid Powerlines & Underground Utilities 7
Detach Tree Saw Safely 7
Hazards From Modifying Equipment 8
2.3 Maintenance Hazards 9
3 SAFETY DECALS 10
3.1 DXD752 10
3.2 DXH752 12
4 OPERATION 14
4.1 Preparation For Use 14
4.1.1 Hydraulic Connections 14
4.1.2 Electrical Connections (If Equipped) 15
4.1.3 Excavator Adapter 16
4.2 Pre-Operation Check List 16
4.3 Machine Components 17
4.4 Attach Tree Saw 18
4.5 Initial Startup 19
4.6 Detach Tree Saw 19
4.7 Transporting 20
4.8 Carbide Teeth Break-In 20
4.9 First Time User Tips 21
4.10 Field Operation 21
4.11 Pressure Relief Adjustment 23
5 SERVICE AND MAINTENANCE 24
5.1 Maintenance 24
5.2 Inspections 25
5.3 Rotate Cutting Teeth 25
5.4 Replace Cutting Teeth 26
5.5 Vent To Atmosphere Relief Valve 26
6 TROUBLESHOOTING 28
7 STORAGE 29
7.1 Storing Tree Saw 29
7.2 Remove Tree Saw From Storage 29
8 WARRANTY 30

1 INTRODUCTION

1.1 Overview

Congratulations on your choice of a Baumalight Tree Saw to complement your pruning, trimming and clearing operation. This equipment has been designed and manufactured to meet the needs of a discriminating buyer for efficient clearing of brush, shrubs and trees.

The blade is hydraulic powered by the hydraulic system on your excavator.

Replaceable bearings are provided at major pivot points for extended service life.

Safe, efficient and trouble free operation of your Tree Saw requires that you and anyone else who will be operating or maintaining the Tree Saw, read and understand the Safety, Operation, Maintenance and Troubleshooting information contained within the Operator's Manual.

This manual covers the Baumalight DXD and DXH Tree Saws. Use the Table of Contents as a guide to locate required information.

Keep this manual handy for frequent reference and to pass on to new operators or owners. Contact your Baumalight dealer if you need assistance, information or additional copies of the manuals.

When this machine is worn out and no longer in use, it should be returned to the retailer or other party for recycling.

OPERATOR ORIENTATION - The directions left, right, front and rear, as mentioned throughout this manual, are as seen from the operator's seat and facing in the direction of travel.

If you do not understand any part of this manual, contact your Baumalight dealer.

1.2 Intended Use And Foreseeable Misuse

The Tree Saw is designed to be used by experienced operators, trained in the safe operation of an excavator and trained in the hazards related to using the tree saw and the safe use of the tree saw for the intended purpose. Operators will require personal protective equipment to reduce the risk from some hazards that cannot be completely eliminated or controlled by the design of the tool.

Care is required to ensure that the tree saw will not come across metallic objects, stones or other materials.

Tree saw is not designed for use in hazardous atmospheres where there is a risk of fire or explosion due to flammable gases or vapors. Use in hazardous, explosive atmospheres is prohibited.

Serious injury or death of the operator or bystanders may be caused if the tree saw is misused. Misuse may also cause damage to the machine carrying the implement.

2 SAFETY

2.1 Safety Alert Symbol And Safety Words

You must read, understand and follow the instructions given by the operating unit manufacturers, as well as the instructions in this manual.

The safety information in this manual is denoted by the safety alert symbol:



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

The level of risk is indicated by the following signal words:

DANGER

DANGER - Indicates a hazardous situation, which, if not avoided, WILL result in death or serious injury.

WARNING

WARNING - Indicates a hazardous situation, which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION - Indicates a hazardous situation, which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE - Indicates a situation that could result in damage to the equipment or other property.

2.2 Operational Hazards

WARNING

Prevent serious injury or death.

Read and understand this manual before operating the tree saw.

Always stop engine and remove key before leaving operators seat.

Never allow anyone near the tree saw during operation.

Travel at a safe speed.

WARNING

Prevent serious injury or death from moving parts.

Moving parts can crush and dismember.

Do not operate without guards and shields in place.

Disconnect and lock out power source before adjusting or servicing.

WARNING

Use tree saw only for the designed applications.

Any other use may result in personal injury, damage to equipment and may void the warranty.

⚠ WARNING

Prevent serious injury or death.

Verify tree saw is attached to excavator before operation or transport.

⚠ WARNING

Protect from flying debris.

Wear proper safety glasses, goggles, or a face shield to protect from flying debris.

⚠ WARNING

Prevent serious injury or death.

It is recommended that the operating unit be equipped with a forestry guard to protect the operator.

Carefully read all safety messages in this manual and on equipment safety signs. Keep safety signs in good condition and replace missing or damaged safety signs.

New equipment components and repair parts must include the current safety decal.

Learn how to properly operate equipment. NEVER operate or work around this equipment without proper instruction, while fatigued or under the influence of alcohol, prescription or non-prescription medication or if feeling ill.

Keep your equipment in proper working condition.

Know the regulations and laws that apply to you and your industry. This manual is not to replace any regulations or laws. Additional information may be found at: www.asae.org or www.osha.gov.

Prepare For Emergencies

- Be prepared in case of emergencies.
- Keep a fire extinguisher and first aid kit close to the machine.
- Keep emergency phone numbers close to your phone.
- Know your address so emergency services can locate you if an emergency arises.

Replace Safety Signs

- Replace missing or damaged safety signs.
- Safety signs are identified in Section 3 of this manual.
- Replacement safety signs are available from your Baumalight dealer.

Do Not Allow Riders

- NEVER lift or carry anyone on the tree saw.
- NEVER use tree saw as a work platform.
- NEVER allow passengers on the tree saw.

Lower Operating Speed

- Keep tree saw low and move at slow speeds on rough or uneven terrain.

Avoid Rollover

The equipment may rollover, resulting in death or serious injury. To help prevent rollover:

- Travel at a slow speed.
- Avoid sharp turns & sudden movement on slopes.
- Carry tree saw close to the ground.
- Avoid holes, ditches and other obstructions which may cause equipment to rollover.
- Use caution when operating on slopes and do not operate on excessively steep slopes.
- Do not exceed load capacity of equipment.

Avoid Powerlines & Underground Utilities

⚠ DANGER

Prevent electrocution.

Death or serious injury can result if equipment comes near or contacts power lines.

Electrocution can occur without direct contact.

DO NOT leave the operator's seat if any part of the equipment contacts electric lines or cables.

Detach Tree Saw Safely

Detach tree saw on a firm and level surface. Tree saw may fall over if detached on sloping or soft surface. Be sure people, livestock and pets are clear of machinery.

Relieve hydraulic pressure before disconnecting hydraulic hoses. See your excavator Operator's Manual.

Raised Attachment

⚠ WARNING

Crushing hazard.

Raised, unsupported tree saw can fall, resulting in death or serious injury.

Never enter the area under a raised tree saw.

A raised tree saw can lower unexpectedly, resulting in death or serious injury.

NEVER enter area under a raised tree saw.

Lower tree saw to ground, engage parking brake, shut off engine and remove key before servicing.

Avoid Loud Noise

⚠ WARNING

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Hazards From Modifying Equipment

Do not make any alterations to your tree saw. Altering the equipment may cause unsafe conditions and may void the manufacturer's warranty.

Avoid Wood Dust Inhalation

⚠ WARNING

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the State of California to cause cancer.

Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection. For more information go to www.P65Warnings.ca.gov/wood.

⚠ WARNING

Wear an approved dust mask or respirator.

Follow local, state and federal regulations.

Avoid High Pressure Fluids

⚠ WARNING

Pressurized fluids can penetrate the skin.

Hydraulic hoses can fail from age, damage and exposure.

Use body and face protection while searching for leaks. A tiny, almost invisible leak can penetrate the skin, thereby requiring immediate medical attention.

Use wood or cardboard to detect hydraulic leaks, never use your hands.

Escaping fluid under pressure can penetrate the skin causing serious injury.

Prevent the hazard by relieving pressure (See Excavator Operator's Manual) before connecting or disconnecting hydraulic lines. Verify all connections are tight before applying pressure.

Search for leaks with a piece of cardboard or wood.

Protect hands and body from high pressure fluids. If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or serious infection may result.

2.3 Maintenance Hazards

Before servicing, park machine on a firm and level surface, remove key, set parking brake and place a “Do Not Operate” tag on control panel. Read and understand this manual. If you do not understand any part of the manual, contact your Baumalight dealer.

Always wear face and/or eye protection, safety shoes, and other protective equipment appropriate for the job.

Do not make unauthorized modifications. Contact your Baumalight dealer before you weld, cut/drill holes, or make any other modifications.

⚠ WARNING

Moving parts can crush and cut.

Keep clear of moving components.

Follow lockout procedure before servicing.

⚠ WARNING

Entanglement hazard.

Keep clear of moving components.

Wear proper protective equipment appropriate for the job.

⚠ WARNING

Burn hazard.

Hot and high pressure hydraulic oil.

Allow oil to cool before servicing.

⚠ WARNING

Crushing hazard.

Before performing inspections, service or maintenance:

Park machine on firm, level surface.

Engage parking brake.

Turn engine off and remove key.

Place “Do Not Operate” tag on control panel.

⚠ WARNING

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the State of California to cause cancer.

Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection. For more information go to www.P65Warnings.ca.gov/wood.

⚠ WARNING


Wear an approved dust mask or respirator.


Follow local, state and federal regulations.

3 SAFETY DECALS


3.1 DXD752

The two and four panel safety decals are pictorial and have a yellow background. The panel with a triangle indicates the potential hazard. The panel without a triangle indicates how to avoid the hazard. If any of the decals are missing, are damaged, or if you do not understand the decal, please contact your dealer.

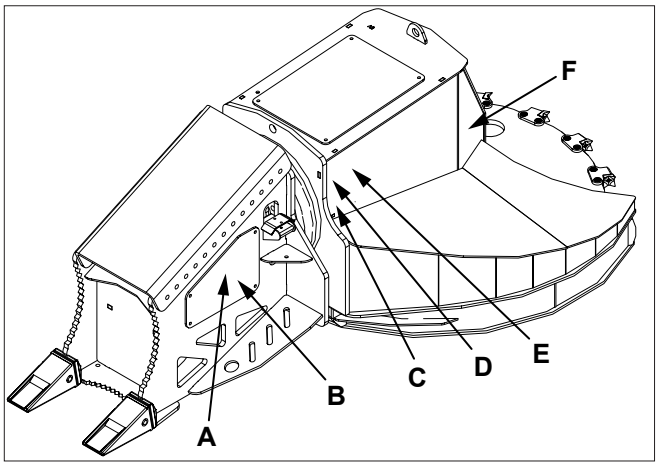

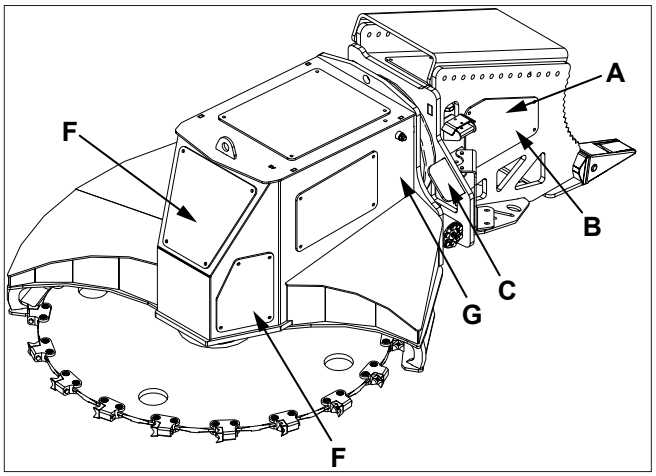

A. D005262 ⚠ WARNING - P65 warning information.

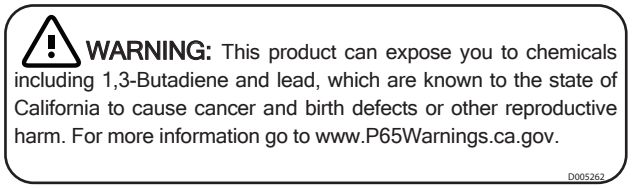


B. D005126 ⚠ WARNING - Pressurized fluid hazard. Pressurized fluids can penetrate the skin. Do not check for leaks with your hands. Keep back a safe distance when pressurized.




C. D005127 ⚠ WARNING - Pinch point / crush hazard. Do not reach into machine. Keep away from machine.



D. D005125 ⚠ WARNING - Read and understand safety signs on the machine and operating instructions in this manual before operating machine.

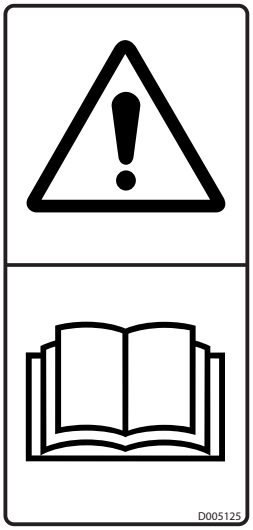

E. D005517 ⚠ WARNING - Remove key before servicing.

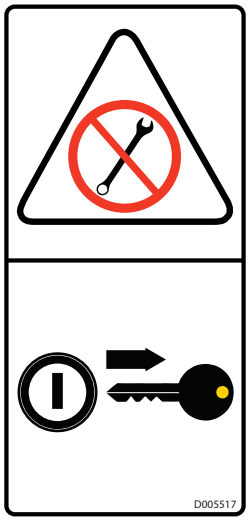

F. D005255 ⚠ WARNING - Rotating blade hazard. Keep back 75 m while machine is operating. Wait for blade to stop before approaching machine.





G. D005335 ⚠ WARNING - Wear personal protective equipment appropriate for the job.




3.2 DXH752

The two and four panel safety decals are pictorial and have a yellow background. The panel with a triangle indicates the potential hazard. The panel without a triangle indicates how to avoid the hazard. If any of the decals are missing, are damaged, or if you do not understand the decal, please contact your dealer.

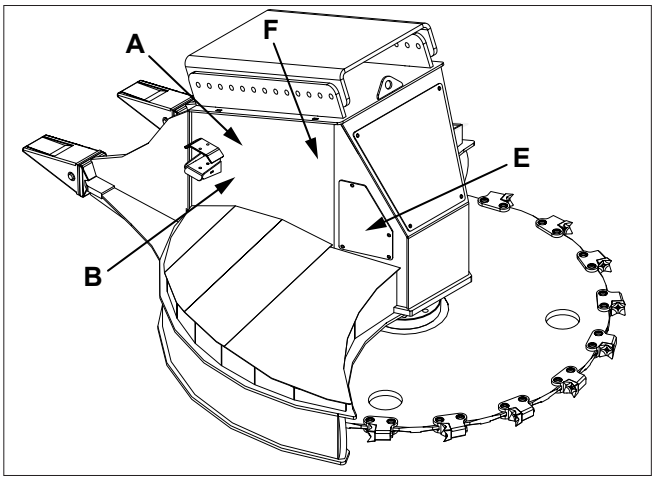

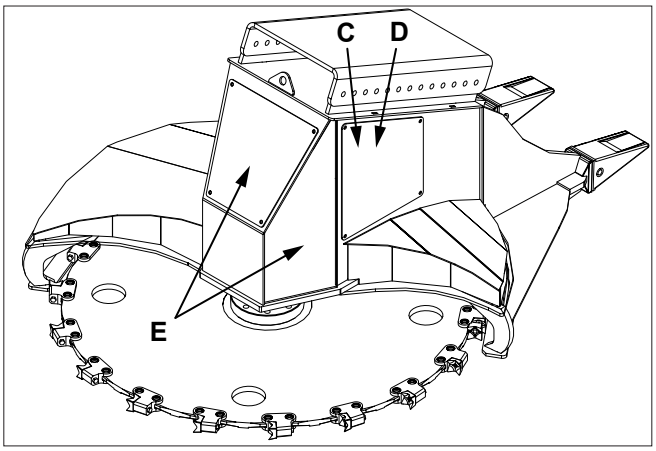


A. D005262 ⚠ WARNING - P65 warning information.

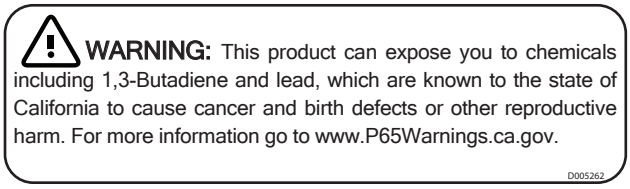


B. D005126 ⚠ WARNING - Pressurized fluid hazard. Pressurized fluids can penetrate the skin. Do not check for leaks with your hands. Keep back a safe distance when pressurized.



C. D005125 ⚠ WARNING - Read and understand safety signs on the machine and operating instructions in this manual before operating machine.

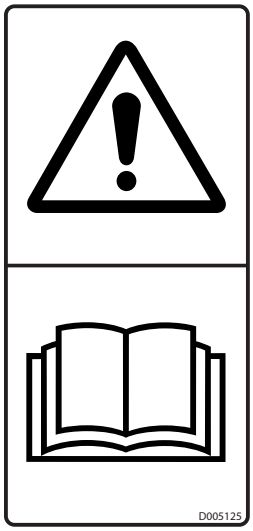

D. D005517 ⚠ WARNING - Remove key before servicing.

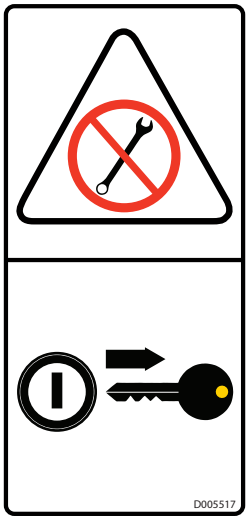

E. D005223 ⚠ WARNING - Rotating blade hazard. Keep back 75 m while machine is operating. Wait for blade to stop before approaching machine.



F. D005335 ⚠ WARNING - Wear personal protective equipment appropriate for the job.



4 OPERATION

4.1 Preparation For Use

⚠ Keep bystanders, livestock, pets, etc away from work area.

⚠ Always wear protective equipment appropriate for the job.

⚠ Do not operate, work on or around this machine while under the influence of alcohol, drugs or if feeling ill.

⚠ Keep clear of moving machinery at all times.

⚠ Stop excavator engine before leaving operators area.

⚠ It is your responsibility to operate this equipment safely. You must be familiar with the equipment and all safety practices before use.

⚠ Do not allow untrained or unqualified people to operate this equipment.

4.1.1 Hydraulic Connections

⚠ WARNING

Pressurized fluids can penetrate the skin.


Disconnect and lock out power source before disconnecting and/or connecting hydraulic hoses.

Baumalight does not provide the hydraulic hoses that connect tree saw motor and motor case drain to excavator. The installer must determine a safe routing for the hydraulic hoses to prevent damage.


Installer provided hoses are not covered by the Baumalight warranty.

***Note**: Side covers have been removed for illustration purposes only. Do not operate with covers removed.*


1. Route hoses through opening (A) in frame.
2. Remove side cover and connect supply hose to port A and return hose to port B on DXH manifold (B) or DXD valve (B).
3. Connect case drain hose to T fitting in hose between case drain port (C) on motor and vent to atmosphere relief valve.

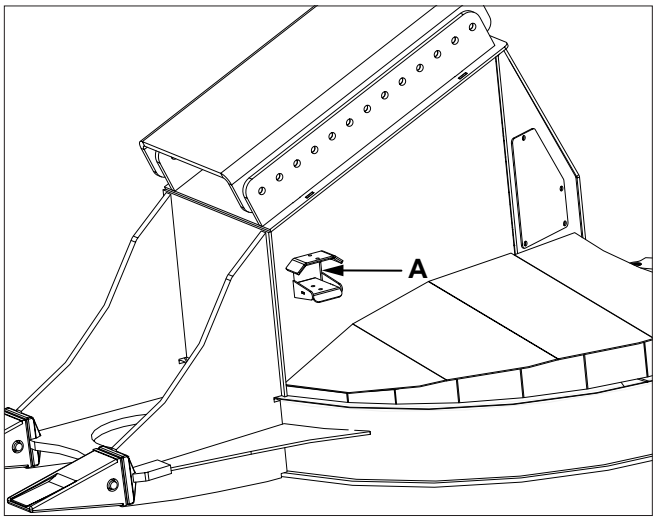

DXH752

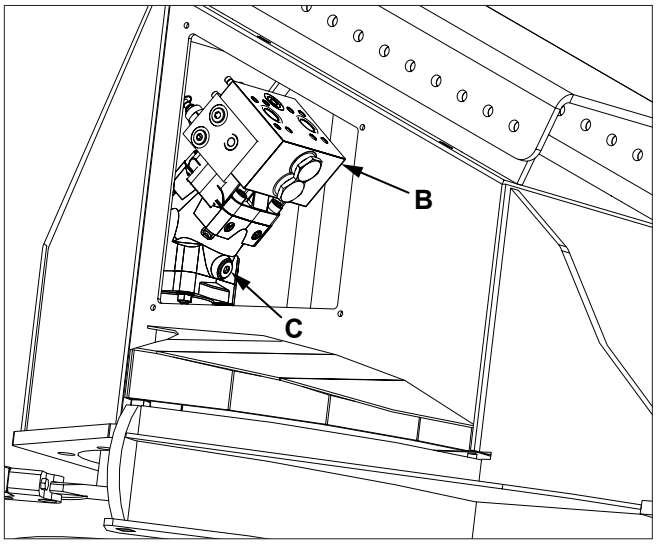

DXH752

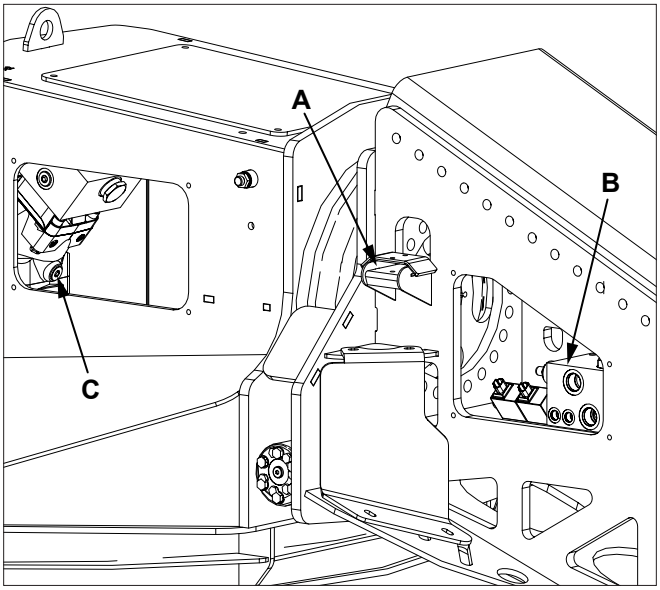

DXD752

4. Install cover(s) and tighten clamp on hose holder to secure hoses.
5. Route hoses along boom and connect to excavator hydraulic system. Connect case drain hose to excavator reservoir.

   Other installed attachments may interfere with tree saw operation and may need to be removed. Routing of the hoses will depend on the excavator and other installed attachments.

   Baumalight does not provide these hoses and they are not covered by the Baumalight warranty.

NOTICE

Prevent equipment damage.

Route hydraulic hoses away from pinch points.


During initial startup, carefully move tree saw and boom to all positions to verify hoses will not be damaged.

4.1.2 Electrical Connections (If Equipped)


Electrical wires that run from tree saw valve to remote pendent are not provided with the tree saw. The installer must determine a safe routing for the electrical wires to prevent damage.

Installer provided wires are not covered by the Baumalight warranty.

1. Remove cover from remote pendent switch.
2. Using 12 gauge or larger wire, connect lighter plug, switch, valve connector plugs and ground points as shown.

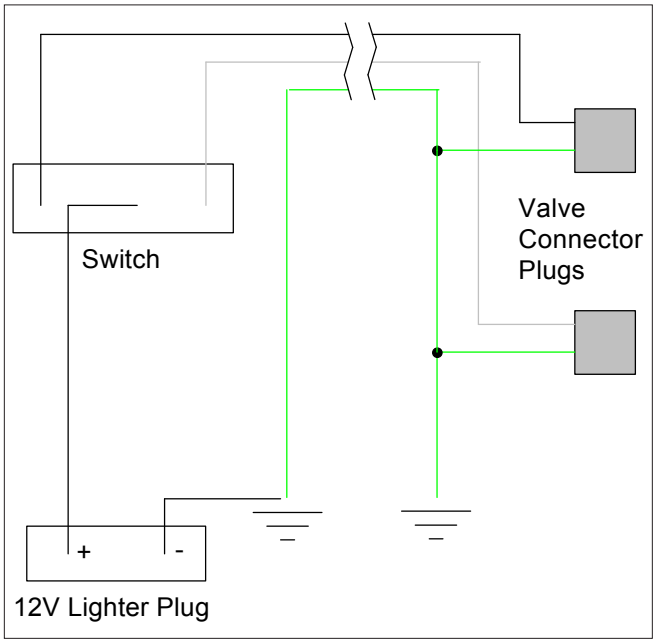

3. Connect optional remote pendent connector (A) to excavator 12 volt power supply.

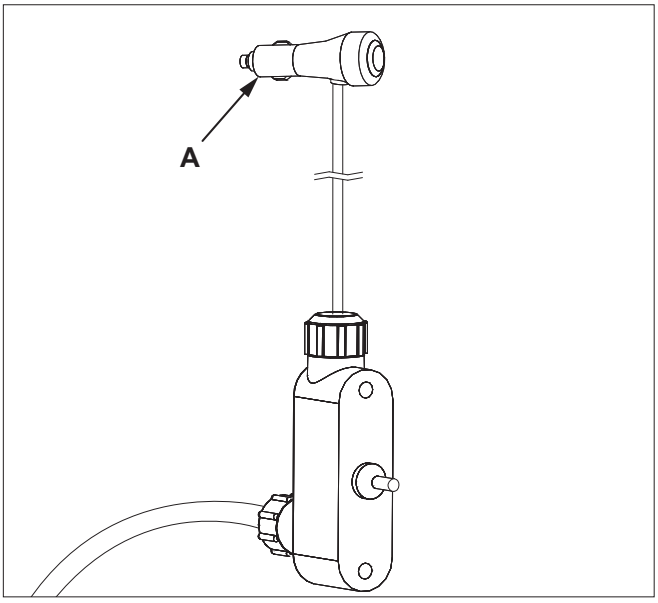


4. Move to a clear open area to test functions.

4.1.3 Excavator Adapter

1. Install excavator adapter (A) on either side of machine mounting bracket (B) as shown.

2. Install and tighten mounting hardware. Tightening the mounting hardware will pull the flanges into place.

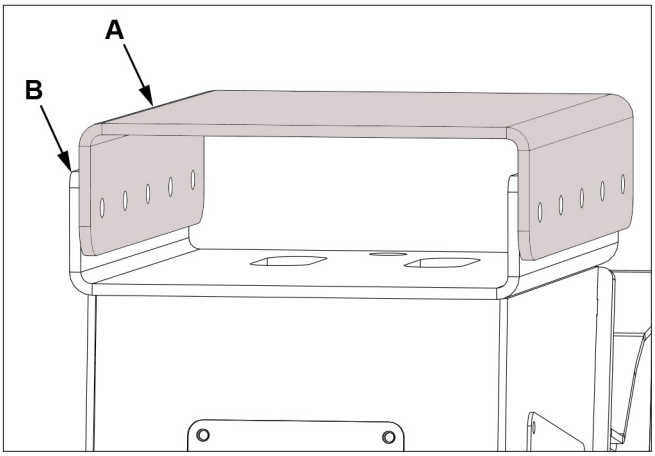

4.2 Pre-Operation Check List

Verify that tree saw is properly attached to excavator.

Verify that hydraulic hoses properly connected.

Check for entangled material on blade.


Verify all guards, doors and covers are installed and secured.

Verify cutting teeth are in good condition and are tight.


4.3 Machine Components

Dashed line indicates item hidden from view unless cover is removed.

A. Cutting Teeth
B. Blade
C. Blade Guard
D. Hydraulic Motor
E. Hydraulic Hose Holder
F. Ripper Teeth
G. Excavator Adapter
H. Rotation Motor

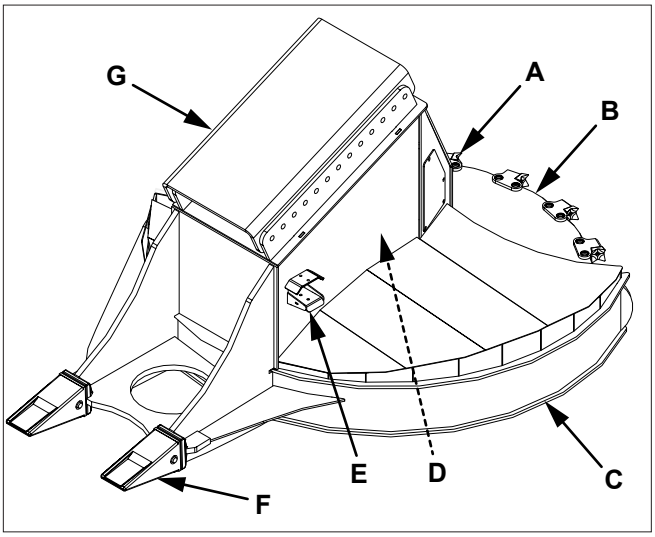

DXH752

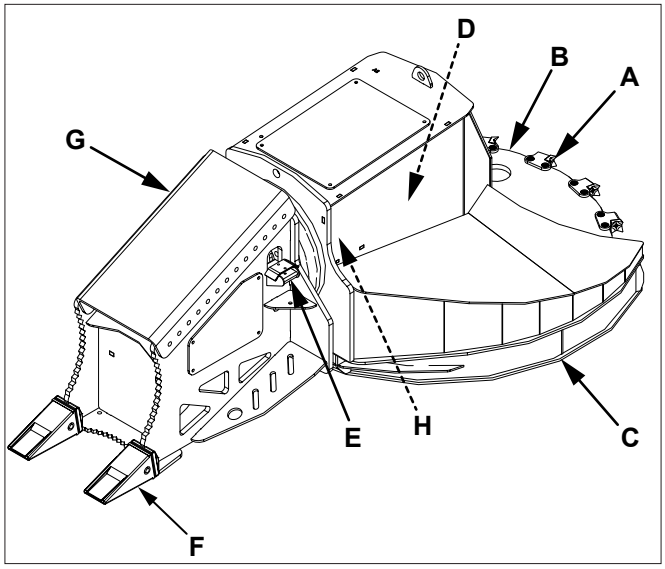

DXD752

4.4 Attach Tree Saw

WARNING

To prevent injury or machine damage put transmission in park.

Never position yourself between excavator and tree saw.

Only experienced and properly trained operator's should operate the excavator and tree saw.

1. Read and follow all safety instructions.
2. Attach tree saw to excavator. See excavator Operator's Manual.
3. Verify pins are secure and in the correct position.


WARNING

Pressurized fluids can penetrate the skin.

Keep bystanders away from machine during operation.

A tiny, almost invisible leak can penetrate the skin, thereby requiring immediate medical attention.

4. Connect hydraulic hoses. Verify hydraulic hoses are clear of pinch areas and moving parts.
5. (If Equipped) Connect optional remote pendent connector (A) to excavator 12 volt power supply.

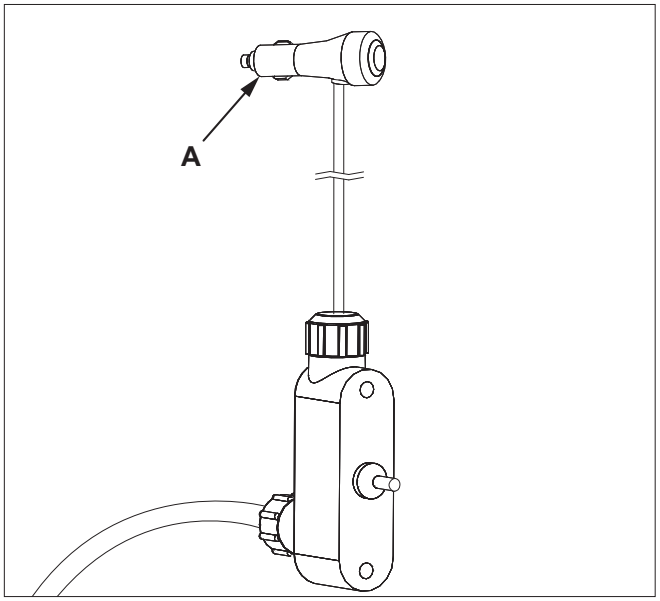


6. Move to a clear open area to test functions.


4.5 Initial Startup

Perform an initial startup and carefully move tree saw and boom to all positions to verify hoses will not be damaged.

Carefully watch the circled areas in below images to be sure hoses are not pinched or kinked. Reroute if damage may occur.

Baumalight does not provide these hoses and they are not covered by the Baumalight warranty.

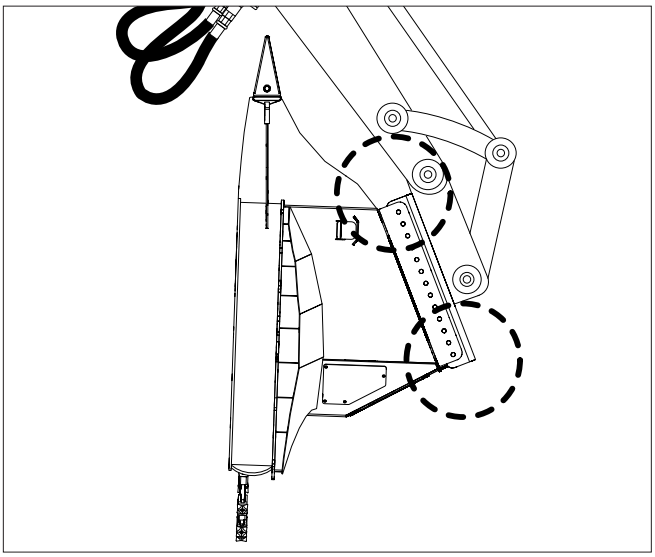

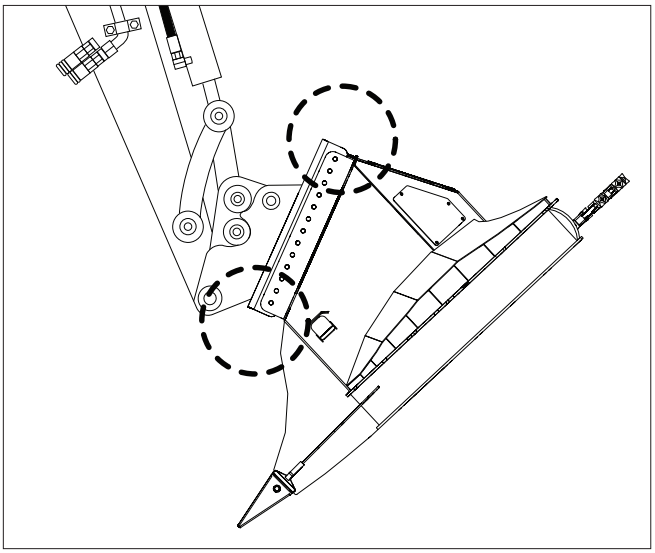

4.6 Detach Tree Saw

⚠ WARNING

Prevent serious injury or death.

1. **Park machine on firm, level surface.**
2. **Engage parking brake.**
3. **Disconnect hydraulic drive.**
4. **Shut off engine and remove key.**

1. Park on a level surface.
2. Lower tree saw to the ground.
3. Shut off engine and remove key.
4. Disconnect hydraulic hoses.
5. Detach tree saw from excavator. See Operator's Manual.

4.7 Transporting

1. Verify all reflectors and SMV sign are visible.
2. Raise tree saw slightly off ground.
3. Verify hydraulics are disengaged.
4. Travel at a reasonable and safe speed.

⚠ WARNING

To prevent bodily injury from rotating blade, be sure to disengage hydraulics before transporting tree saw.

4.8 Carbide Teeth Break-In

During the first few hours of use, avoid hitting stones as much as possible to allow the carbide teeth to wear slightly. This can be done by keeping the cutting wheel above ground level. Brand new carbide tips are razor sharp and can chip and shatter easily when they hit hard objects. Once the razor sharpness has worn away, the tips do not chip as easily. Observing these precautions will extend the life of the carbide teeth and reduce operating expenses.

The teeth bolts must be retightened every ten minutes for the first hour of use on a new tree saw.

4.9 First Time User Tips

- First, operate all functions in a clear area with throttle at low idle to get a good feel for the controls before you actually move into any brush.
- Slow cutting speed if pressure surges up close to max psi. Doing this will greatly reduce blade stoppage.
- Run throttle at half speed for first time users.
- Move the tree saw slowly until you have a better feel how much the unit can take.
- The machine is equipped with a front push bar to push brush or small trees over. This will allow the tree saw teeth to contact the lower portion of the brush and the blade to cut it off.
- Each operator must experiment to find a technique that works for them in their application.

⚠ WARNING

Always turn off excavator and disengage hydraulic drive before getting off the seat and approaching the blade.

⚠ WARNING

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the State of California to cause cancer.

Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection. For more information go to www.P65Warnings.ca.gov/wood.

⚠ WARNING

Wear an approved dust mask or respirator.

Follow local, state and federal regulations.

4.10 Field Operation

⚠ WARNING

Prevent serious injury or death.

1. **Park machine on firm, level surface.**
2. **Engage parking brake.**
3. **Disconnect hydraulic drive.**
4. **Shut off engine and remove key.**

⚠ WARNING

Prevent serious injury or death.

Never operate tree saw when other people are in the vicinity.

Debris can be thrown from cutting area.

Keep all shields in place.

Keep away from moving parts.

⚠ WARNING

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the State of California to cause cancer.

Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection. For more information go to www.P65Warnings.ca.gov/wood.

⚠ WARNING

Wear an approved dust mask or respirator.

Follow local, state and federal regulations.

⚠ WARNING


Prevent serious injury or death.

It is recommended that the operating unit be equipped with a forestry guard to protect the operator.

1. Attach tree saw to excavator. See Attach Tree Saw in this section.
2. Set engine speed to low idle and engage hydraulics.
3. Slowly increase engine speed to high idle. Verify tree saw is operating smoothly.

   Position tree saw as needed to obtain the closest cut to trunk or ground.

   Rotate cutting head as needed to obtain the closest cut to trunk or ground.

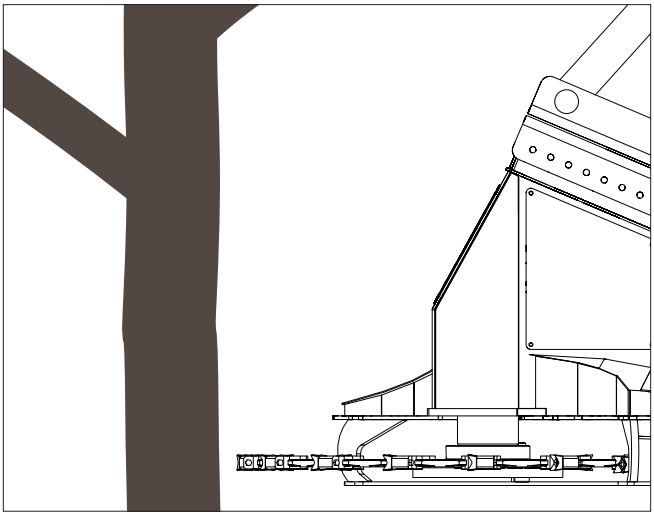

4. Operate hydraulics to move tree saw blade into brush, shrubs or tree.
5. If blade stalls, stop movement, move tree saw away from brush, trees or shrubs and allow blade to regain speed. Slow movement to prevent further stalling.

⚠ WARNING

Moving parts can crush and cut.


Keep clear of moving components.

Lockout operating unit before clearing jams.

⚠ WARNING

Never approach tree saw before blade has come to a complete stop.

5. Tilt tree saw and use ripper teeth to drag cut trees and brush out of the way.

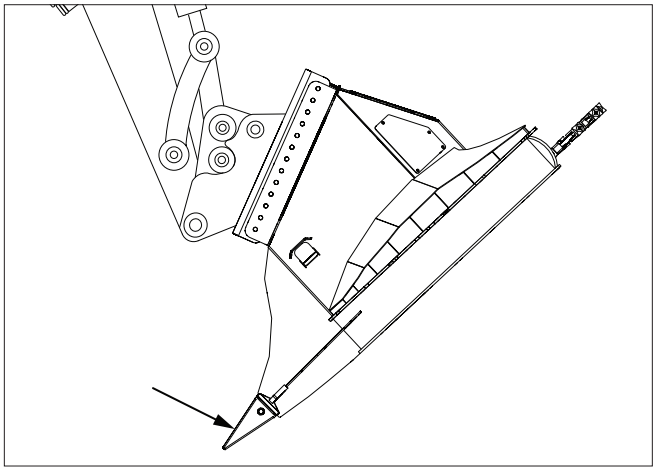

6. When cutting is completed, disengage hydraulics and allow blade to stop.
7. Lower tree saw to ground and stop excavator engine.

4.11 Pressure Relief Adjustment

⚠ WARNING


Prevent serious injury or death caused by unexpected movement:

1. **Park on a level surface.**
2. **Lower tree saw the to ground.**
3. **Engage parking brake.**
4. **Shut off engine and remove key.**

1. Park on a level surface.
2. Lower tree saw to the ground.
3. Engage parking brake, shut off engine and remove key.

(A) Flow Adjust - Adjusting the flow determines how much oil is sent to the actuator and blade. The more oil that is sent to the blade will result in actuator moving slower. If more oil is sent to the actuator, blade speed will decrease. Typical adjustment is 1/2 turn out from closed position. To adjust, hold hex screw with hex wrench and loosen lock nut. Turn hex screw and hold in position while tightening lock nut. Test operation and adjust again if desired.

(B) Pressure relief must be set lower than machine relief. 1/4 turn out from closed position is approximately 3000 psi (207 bar). To adjust, hold hex screw with hex wrench and loosen lock nut. Turn hex screw in to increase pressure, or out to decrease pressure. Turn hex screw in 1/4 turn increments until desired pressure is achieved. Hold hex screw in position while tightening lock nut.

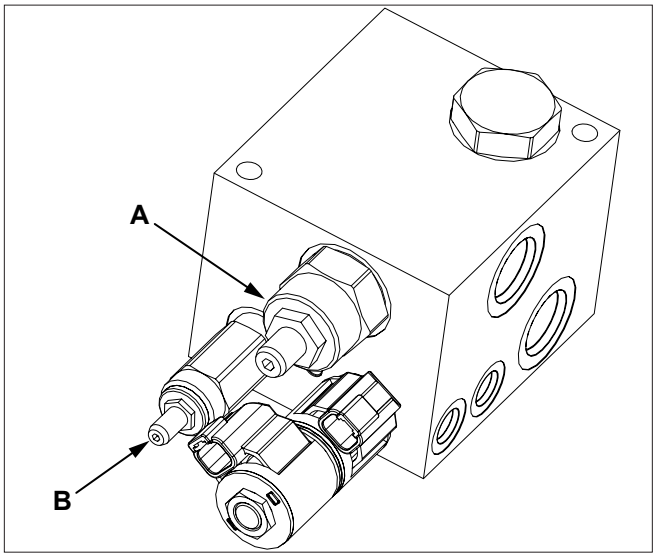

5 SERVICE AND MAINTENANCE

5.1 Maintenance

Maintenance Chart		
General Inspection	Inspect the unit for any buildup of contamination (dirt, stones, etc.).	Daily.
Hydraulic Hoses	Inspect hydraulic hoses for damage and wear.	Daily.
Cutting Teeth	The teeth bolts must be retightened every ten minutes for the first hour of use on a new tree saw.	Every 10 minutes for the first hour, then every 6 hours of use.
Cutting Teeth	Check and replace one at a time as necessary. With daily use expect to replace 4 to 6 teeth per day. See Replace Cutting Teeth in this section.	Every 6 hours.

We design many of our products using industry-standard parts that are widely available from local supply stores.

Many replacement parts such as bearings, belts, seals, touch-up paint and cutting teeth can often be found through local suppliers, not just from Baumalight.



5.2 Inspections

WARNING

Prevent serious injury or death.

1. **Park machine on firm, level surface.**
2. **Engage parking brake.**
3. **Disconnect hydraulic drive.**
4. **Shut off engine and remove key.**

WARNING

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the State of California to cause cancer.

Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection. For more information go to www.P65Warnings.ca.gov/wood.

WARNING

Wear an approved dust mask or respirator.

Follow local, state and federal regulations.

Inspect the unit for any buildup of contamination (dirt, stones, etc.).

Check condition of cutting teeth every 6 hours of use. Replace cutting teeth as needed. Unit will cut faster and remaining teeth will last longer if broken teeth are replaced.


Inspect hydraulic hoses for damage and wear.

5.3 Rotate Cutting Teeth

Check condition of cutting teeth every 6 hours of use. Keep cutting teeth in good condition. Unit will cut faster and remaining teeth will last longer if broken or worn teeth are replaced.

Each tooth can be rotated one time from its original position before replacement is necessary.


1. Park tree saw on a level surface.
2. Lower blade to the ground.
3. Shut off engine and lockout engine controls.
4. Inspect teeth for wear on top edge. Once outside cutting edge is worn, rotate tooth 180° so the new edge is on outside.
5. Remove bolt (A) on tooth (B) and rotate tooth 1/2 turn. Flat shoulder on tooth will fit against shoulder (C) on tooth holder.
6. Install and tighten bolt (A) to 37 lb/ft (50 Nm) of torque.

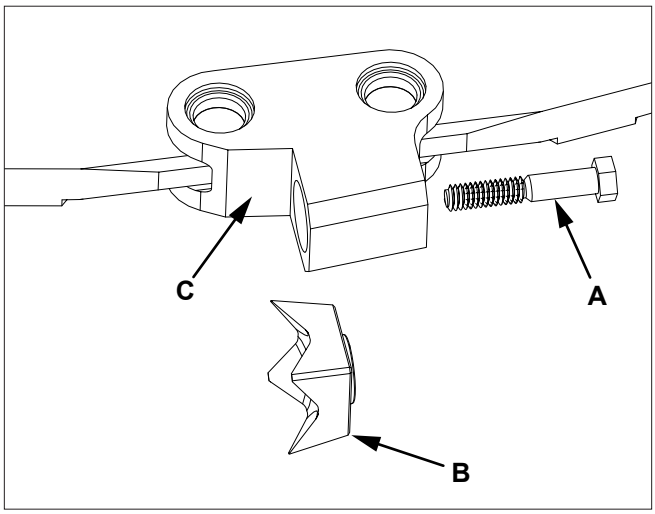

***Note**: Parts breakdown can be found on Baumalight's website. www.baumalight.com*

5.4 Replace Cutting Teeth

1. Park tree saw on a level surface.
2. Lower blade to the ground.
3. Shut off engine and lockout engine controls.
4. Remove bolt (A) on tooth (B) and remove tooth. Install new tooth so flat shoulder on tooth is against shoulder (C) on tooth holder.
5. Install and tighten bolt (A) to 37 lb/ft (50 Nm) of torque.

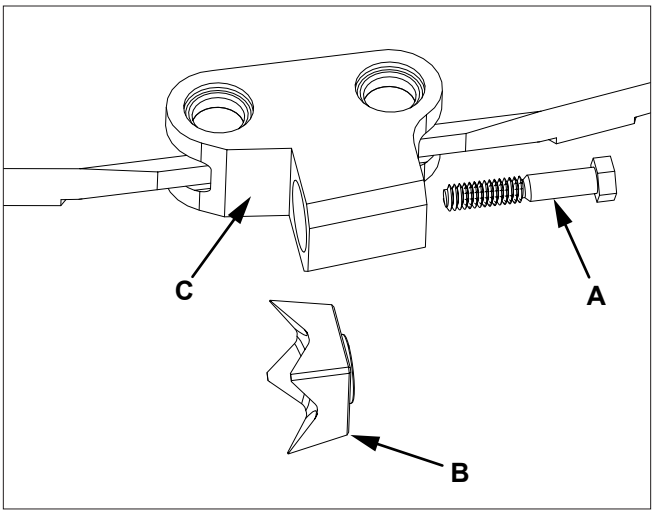

***Note**: Parts breakdown can be found on Baumalight's website. www.baumalight.com*

5.5 Vent To Atmosphere Relief Valve

The tree saw is equipped with a case drain line that is to be routed to the excavator hydraulic reservoir, and a vent to atmosphere relief valve.

It is normal for a hydraulic motor to have a slight amount of internal leakage.

The case drain line will allow this internal leakage to be returned to the reservoir, preventing excessive pressure on the motor seal.

In the event there is a spike in pressure in your hydraulic lines, the case drain will relieve the pressure and drain it back into the return line and back to the tank. If the connection of the case drain is missed or if the line is blocked, the case drain will vent to notify you.

A properly installed case drain protected by a vent to atmosphere relief valve will save the work of replacing your shaft seal and save you from down time of unexpected maintenance.

⚠ WARNING

Pressurized fluids can penetrate the skin.


Use body and face protection while searching for leaks. A tiny, almost invisible leak can penetrate the skin, thereby requiring immediate medical attention.

Use wood or cardboard to detect hydraulic leaks, never use your hands.


If hydraulic fluid is coming out of the vent to atmosphere relief valve, shut down machine immediately. Inspect the case drain line connection and lines. Contact your dealer if case drain lines and connection are good.

NOTICE
Environmental hazard. **Clean up any spilled hydraulic fluid immediately.**

A properly installed case drain protected by a vent to atmosphere relief valve will save the work of replacing the motor shaft seal and also improve the efficiency of your hydraulic system.

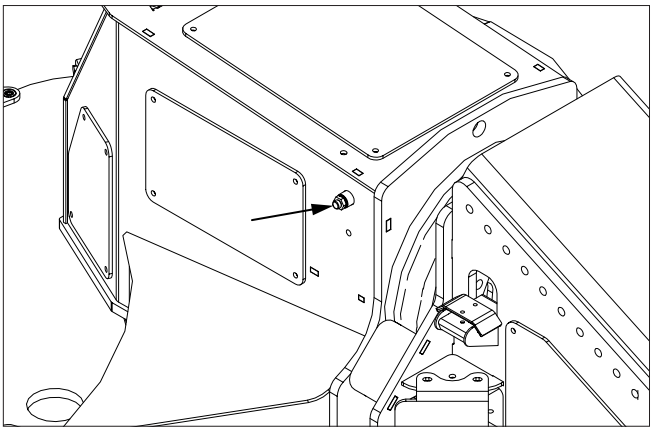

6 TROUBLESHOOTING

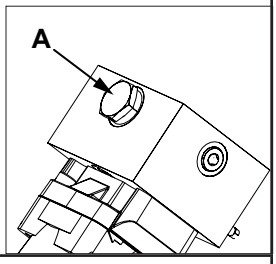PROBLEM	CHECK	SOLUTION
Blade does not spin.	Blade jammed.	Remove material from blade.
	Low oil level.	Check oil level. Add if necessary.
	Low oil flow.	Check flow control on skidsteer. See your dealer.
	Low pressure.	Check valve open.
Blade rotates slow or sluggish.	Low oil.	Check oil level. Add if necessary.
	Oil filter plugged.	Replace skidsteer oil filter.
	Relief valve not set properly.	Set relief pressure to motor specification.
	Low oil flow.	Set relief pressure to motor specification.
Excessive vibration.	Cutting teeth worn or missing.	Replace worn, broken or missing teeth.
	Debris lodged in blade.	Remove debris.
Low cutting power.	Check to see if blade can be turn backward with hoses disconnected.	If blade can be turned, anti-cavitation valve (A) may be stuck open. Remove and clean anti-cavitation valve. 
	Low flow or pressure.	Check hydraulic pump flow and pressure.
		Disconnect pressure line to saw and install a pressure gauge in line. Test pressure. Contact your dealer if pressure is low.
	Check blade speed with a photo tachometer.	Contact your dealer for recommended blade speed based on the motor and machine GPM.
Hydraulic fluid coming out of zero leak relief valve.	Case drain connector for proper connection and line for obstructions or pinched line.	Connect case drain line if not connected. Replace line if damage, obstructed or pinched.
	Combo coupler seals.	Combo coupler seals may be leaking, allowing pressurized fluid to escape to the case drain line.

7 STORAGE

7.1 Storing Tree Saw

1. Store tree saw in a dry place.
2. Clean tree saw thoroughly. Dirt and wood chips will draw moisture and cause rust.
3. Check condition of cutting teeth. Replace as necessary. (See Service and Maintenance section.)
4. Check for loose or missing hardware.
5. Paint parts as necessary.

7.2 Remove Tree Saw From Storage

1. Review Operator's Manual.
2. If parts have been replaced, verify they operate properly.

8 WARRANTY

To view the warranty, scan the QR Code below, or go to Baumalight.com. From the Support drop down, click on Support, then select Tree Saws. Select Product Warranty.

For parts, specifications and the latest machine information please visit our website.

www.baumalight.com

MTB MFG INC.
CORPORATE HEADQUARTERS
4575 Powell Rd.,
Wallenstein, Ontario Canada
N0B 2S0
www.baumalight.com