
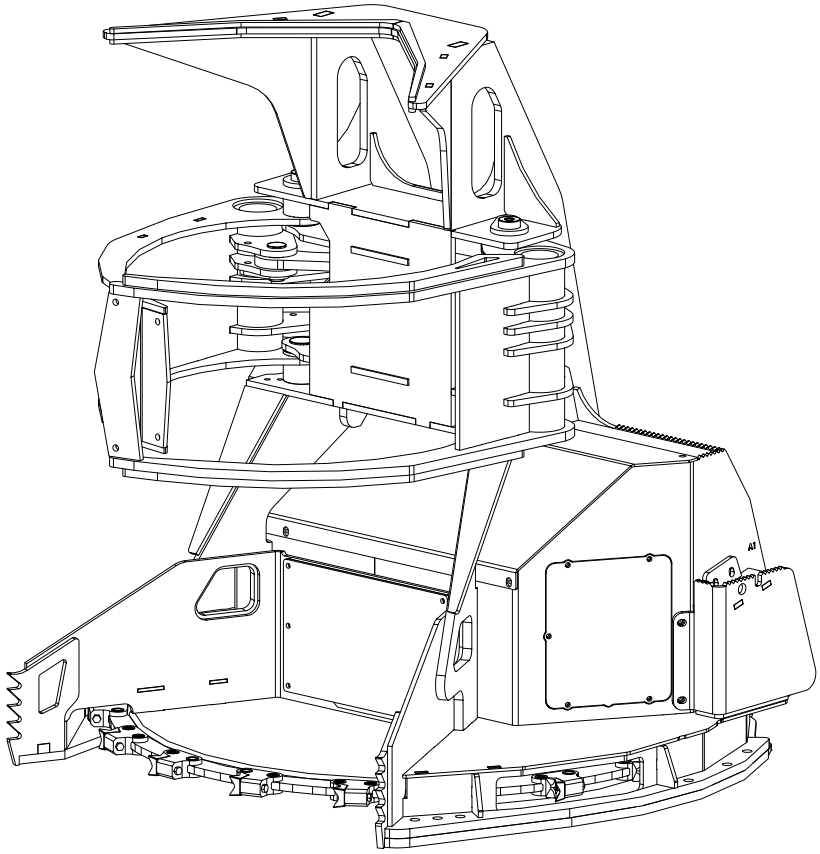


BAUMALIGHT™

FGS952 Feller Buncher

OPERATOR'S MANUAL

Issue Date: October 2026

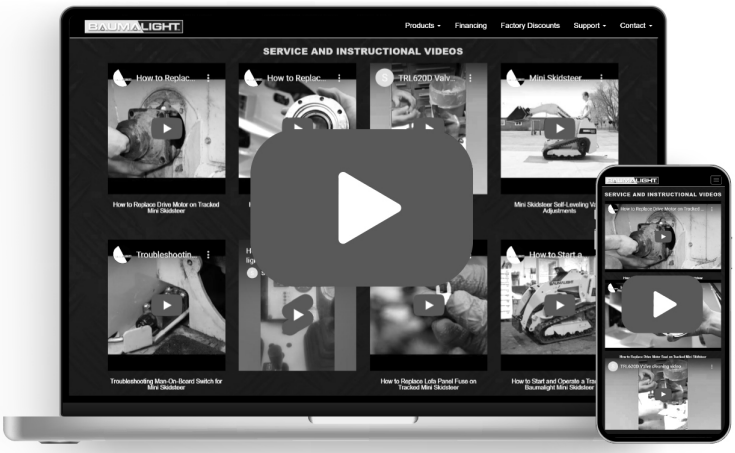

Service And Instructional Videos

Find online at baumalight.com/support

Following is a list of videos and documents available on Baumalights website and also on YouTube to help and enhance maintaining the feller buncher. The list below was current at the time this manual was issued. Additional content may be available.

Activity ID Number	Activity Name	Description	Item Available
86	Inserting A Pin In A 8 And 14 Pin Connector.	Changing Pins In Aux Receptacle.	Video
206	Replacing Teeth.	When To Replace B8000 Teeth.	Video
269	Skidsteer Case Drain Back-Pressure.	What May Cause Skidsteer Case Drain Back-Pressure.	Video
270	Skidsteer Case Drain Back-Pressure.	Testing Case Drain Back-Pressure With Pressure Gauge.	Video
271	Skidsteer Case Drain Back-Pressure.	Testing Case Drain Back-Pressure With Open Coupler.	Video
312	Hydraulic Motor.	Breaking In Replacement Hydraulic Motor.	Video
431	Hydraulic Cylinder.	Replacing Seals On Hydraulic Cylinder.	Video
102	Remove Seal.	Remove Seal On Motor Or Load Adapter.	Video
120	Zero-Leak Relief Valve.	Demonstrating And Troubleshooting Zero-Leak.	Video
137	Replace Motor Shaft Seal.	Replace Shaft Seal On Piston Motor.	Video
452	John Deere P Series.	AUX Pin Out Support.	Document
467	Communicating Measurements.	Why Not To Send Pictures Of Measuring Tapes To Communicate Measurements	Video

TABLE OF CONTENTS

1 INTRODUCTION 4
1.1 Overview 4
1.2 Intended Use And Foreseeable Misuse 4
2 SAFETY 5
2.1 Safety Alert Symbol And Safety Words 5
2.2 Operational Hazards 5
Prepare For Emergencies 6
Replace Safety Signs 6
Do Not Allow Riders 6
Lower Operating Speed 6
Avoid Rollover 7
Avoid Powerlines 7
Detach Feller Buncher Safely 7
Hazards From Modifying Equipment 7
2.3 Maintenance Hazards 9
3 SAFETY SIGNS 10
4 OPERATION 13
4.1 Preparation For Use 13
4.2 Hydraulic Connections 13
4.3 Control (Optional) 13
4.4 Machine Components 14
4.5 Attach To Skidsteer 14
4.6 Detach From Skidsteer 15
4.7 Transporting 15
4.8 Operation 15
4.9 Hydraulic Adjustments 17
5 SERVICE AND MAINTENANCE 18
5.1 Lubrication 18
5.2 Inspect Hoses 19
5.3 Inspect And Rotate Or Replace Cutting Teeth 20
5.4 Remove And Install Rotor 21
5.5 Zero Leak Case Drain Relief Valve 22
6 TROUBLESHOOTING 24
7 STORAGE 25
7.1 Storing 25
7.2 Remove From Storage 25
8 WARRANTY 26

1 INTRODUCTION

1.1 Overview

Congratulations on your choice of a Baumalight Feller Buncher to complement your operation. This equipment has been designed and manufactured to meet the needs of a discriminating buyer.

This new and unique design allows us to build it very economically and makes it a very compact unit for storage and transport. Hydraulic controls are easy to adjust and operate.

Safe, efficient and trouble free operation of your feller buncher requires that you and anyone else who will be operating or maintaining the feller buncher, read and understand the Safety, Operation, Maintenance and Troubleshooting information contained within the Operator's Manual.

This manual covers the Baumalight skidsteer mounted Feller Buncher. Use the Table of Contents as a guide to locate required information.

Keep this manual handy for frequent reference and to pass on to new operators or owners. Contact your Baumalight dealer if you need assistance, information or additional copies of the manuals.

OPERATOR ORIENTATION - The directions left, right, front and rear, as mentioned throughout this manual, are as seen from the operator's seat and facing in the direction of travel.

1.2 Intended Use And Foreseeable Misuse

The feller buncher is designed to be used by an experienced operator. Operator must be trained in the safe operation of a skidsteer and hazards related to using the feller buncher and the safe use of the feller buncher for the intended purpose.

Operators will require personal protective equipment to reduce the risk from some hazards that cannot be completely eliminated or controlled by the design of the feller buncher.

Care is required to ensure that the feller buncher will not come in contact with metallic objects, stones or other materials.

Feller bunchers are not designed for use in hazardous atmospheres where there is a risk of fire or explosion due to flammable gases or vapors. Use in hazardous, explosive atmospheres is prohibited. Serious injury or death of the operator or bystanders may be caused if feller buncher is misused. Misuse may also cause damage to the machine carrying the feller buncher.

2 SAFETY

2.1 Safety Alert Symbol And Safety Words

You must read, understand and follow the instructions given by the operating unit manufacturers, as well as the instructions in this manual.

The safety information in this manual is denoted by the safety alert symbol:



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

The level of risk is indicated by the following signal words:

DANGER

DANGER - Indicates a hazardous situation, which, if not avoided, WILL result in death or serious injury.

WARNING

WARNING - Indicates a hazardous situation, which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION - Indicates a hazardous situation, which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE - Indicates a situation that could result in damage to the equipment or other property.

2.2 Operational Hazards

WARNING

Prevent serious injury or death.

Read and understand this manual before operating the feller buncher.

Always stop engine and remove key before leaving operators seat.

Never allow anyone near the feller buncher during operation.

Travel at a safe speed.

WARNING

Prevent serious injury or death from moving parts.

Moving parts can crush and dismember.

Do not operate without guards and shields in place.

Disconnect and lockout power source before adjusting or servicing.

WARNING

Use feller buncher only for the designed applications.

Any other use may result in personal injury, damage to equipment and may void the warranty.

⚠ WARNING

Prevent serious injury or death.

Verify feller buncher is locked to quick attach hitch before operation or transport.

⚠ WARNING

Protect from flying debris.

Wear proper safety glasses, goggles, or a face shield to protect from flying debris.

⚠ WARNING

Prevent serious injury or death.

It is recommended that the operating unit be equipped with a forestry guard to protect the operator.

Carefully read all safety messages in this manual and on equipment safety signs. Keep safety signs in good condition and replace missing or damaged safety signs.

New equipment components and repair parts must include the current safety decal.

Learn how to properly operate equipment. NEVER operate or work around this equipment without proper instruction, while fatigued or under the influence of alcohol, prescription or non-prescription medication or if feeling ill.

Keep your equipment in proper working condition. Know the regulations and laws that apply to you and your industry.

This manual is not to replace any regulations or laws. Additional information may be found at: www.asae.org or www.osha.gov.

If you do not understand any part of this manual, contact your Baumalight dealer.

Prepare For Emergencies

- Be prepared in case of emergencies.
- Keep a fire extinguisher and first aid kit close to the machine.
- Keep emergency phone numbers close to your phone.
- Know your address so emergency services can locate you if an emergency arises.

Replace Safety Signs

- Replace missing or damaged safety signs.
- Safety signs are identified in Section 3 of this manual.
- Replacement safety signs are available from your Baumalight dealer.

Do Not Allow Riders

- NEVER lift or carry anyone on the feller buncher.
- NEVER use feller buncher as a work platform.
- NEVER allow passengers on the feller buncher.

Lower Operating Speed

- Keep feller buncher low and move at slow speeds on rough or uneven terrain.

Avoid Rollover

The equipment may rollover, resulting in death or serious injury. To help prevent rollover:

- Travel at a slow speed.
- Avoid sharp turns & sudden movement on slopes.
- Carry feller buncher close to the ground.
- Avoid holes, ditches and other obstructions which may cause equipment to rollover.
- Balance load so weight is evenly distributed and load is stable.
- Use caution when operating on slopes and do not operate on excessively steep slopes.
- Do not exceed load capacity of equipment.

Avoid Powerlines

⚠ DANGER

Prevent electrocution.

Death or serious injury can result if equipment or tree comes near or contacts power lines.

Electrocution can occur without direct contact.

- Check clearance before raising equipment.
- Verify cut trees will not contact or come near power line.

DO NOT leave the operator's seat if any part of the equipment contacts electric lines or cables.

Detach Feller Buncher Safely

Detach feller buncher on a firm and level surface. Feller buncher may fall over if detached on sloping or soft surface. Be sure people, livestock and pets are clear of machinery.

Relieve hydraulic pressure before disconnecting hydraulic hoses.

Raised Attachment

⚠ WARNING

Crushing hazard.

Raised, unsupported feller buncher can fall, resulting in death or serious injury.

Never enter the area under a raised feller buncher.

A raised feller buncher can lower unexpectedly, resulting in death or serious injury.

NEVER enter area under a raised feller buncher.

Lower feller buncher to ground, engage parking brake, shut off engine and remove key before servicing.

Hazards From Modifying Equipment

Do not make any alterations to your feller buncher. Altering the equipment may cause unsafe conditions and may void the manufacturer's warranty.

Avoid High Pressure Fluids

WARNING

Pressurized fluids can penetrate the skin.

Hydraulic hoses can fail from age, damage and exposure.

Use body and face protection while searching for leaks. A tiny, almost invisible leak can penetrate the skin, thereby requiring immediate medical attention.

Use wood or cardboard to detect hydraulic leaks, never use your hands.

Escaping fluid under pressure can penetrate the skin causing serious injury.

Prevent the hazard by relieving pressure before connecting or disconnecting hydraulic lines. Verify all connections are tight before applying pressure.

Search for leaks with a piece of cardboard or wood.

Protect hands and body from high pressure fluids. If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or serious infection may result.

Avoid Loud Noise

WARNING

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Avoid Wood Dust Inhalation

WARNING

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the State of California to cause cancer.

Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection. For more information go to www.P65Warnings.ca.gov/wood.

WARNING

Wear an approved dust mask or respirator.

Follow local, state and federal regulations.

2.3 Maintenance Hazards

Before servicing, park machine on a firm and level surface, remove key, set parking brake and place a “Do Not Operate” tag on control panel. Read and understand this manual. If you do not understand any part of the manual, contact your Baumalight dealer.

Always wear face and/or eye protection, safety shoes, and other protective equipment appropriate for the job.

Do not make unauthorized modifications. Contact your Baumalight dealer before you weld, cut/drill holes, or make any other modifications.

⚠ WARNING

Moving parts can crush and cut.

Keep clear of moving components.

Follow lockout procedure before servicing.

⚠ WARNING

Burn hazard.

Hot and high pressure hydraulic oil.

Allow oil to cool before servicing.

⚠ WARNING

Entanglement hazard.

Keep clear of moving components.

Wear proper protective equipment appropriate for the job.

⚠ WARNING

Crushing hazard.

Before performing inspections, service or maintenance:

- **Park machine on firm, level surface.**
- **Engage parking brake.**
- **Turn engine off and remove key.**
- **Place “Do Not Operate” tag on control panel.**

⚠ WARNING

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the State of California to cause cancer.

Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection. For more information go to www.P65Warnings.ca.gov/wood.

⚠ WARNING


Wear an approved dust mask or respirator.


Follow local, state and federal regulations.


3 SAFETY SIGNS

The two and four panel safety decals are pictorial and have a yellow background. The panel with a triangle indicates the potential hazard. The panel without a triangle indicates how to avoid the hazard.

If any of the decals are missing, are damaged, or if you do not understand the decal, please contact your dealer.

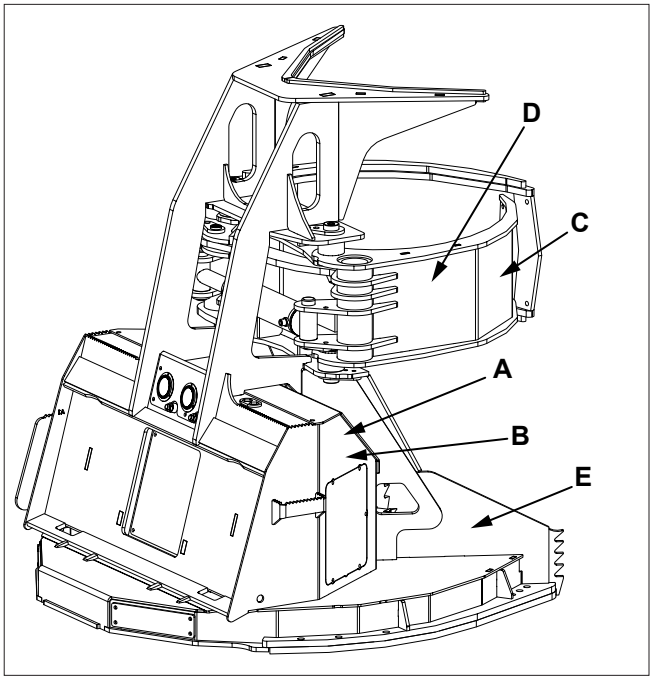

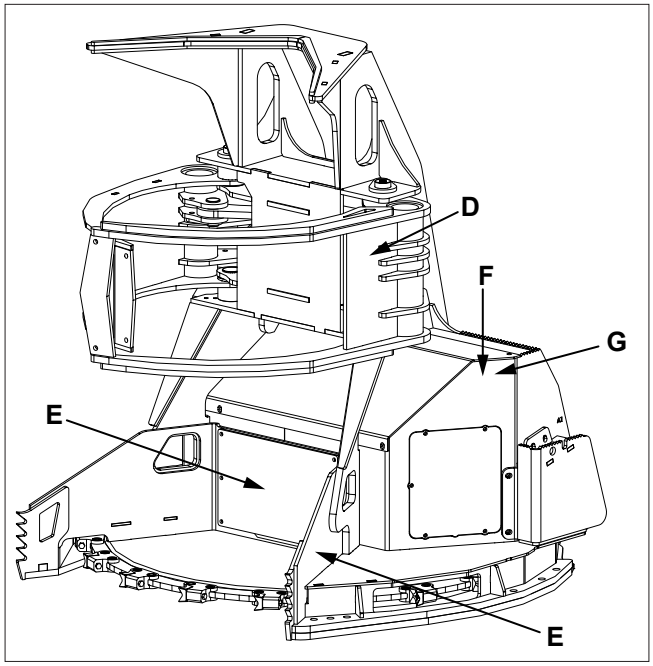


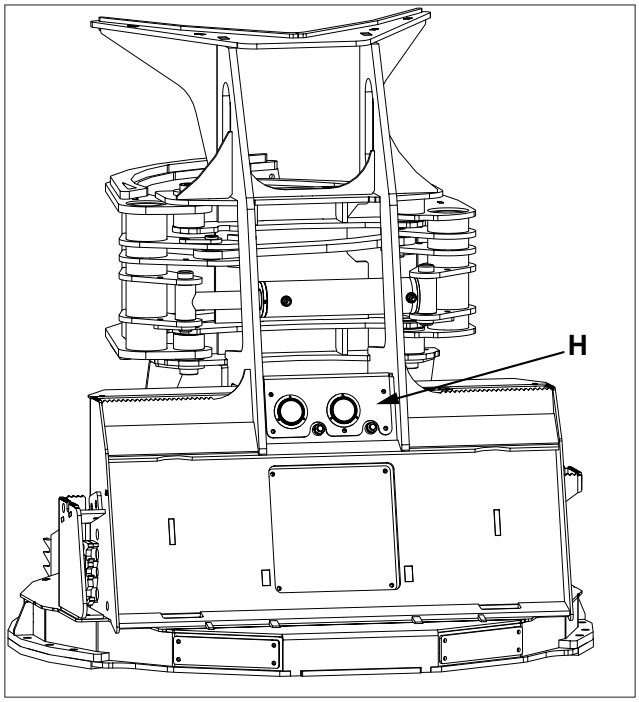

A. D005253 ⚠ WARNING - Pressurized fluid hazard. Pressurized fluids can penetrate the skin. Do not check for leaks with your hands. Keep back a safe distance when pressurized.



B. D005262 ⚠ WARNING - P65 warning information.

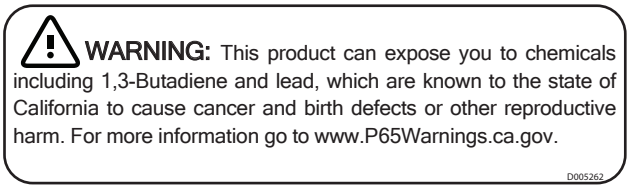

C. D003190 ⚠ DANGER




D. D005127 ⚠ WARNING - Pinching hazard. Keep back while machine is operating.




E. D005223 ⚠ WARNING - Rotating blade hazard. Keep back 75 m while machine is operating. Wait for blade to stop before approaching machine.



F. D005125 ⚠ WARNING - Read and understand safety signs on the machine and operating instructions in this manual before operating machine.

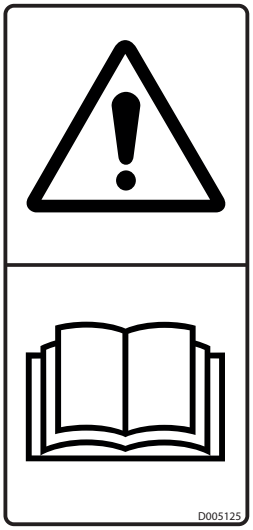

G. D005517 ⚠ WARNING - Remove key before servicing.

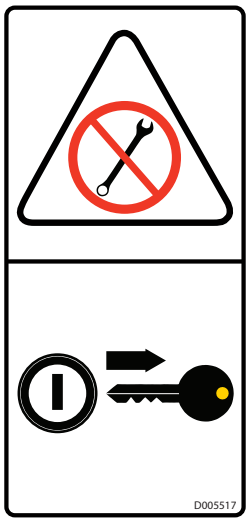

H. D006752 ⚠ WARNING - Do not operate without forestry door.



4 OPERATION

4.1 Preparation For Use

Although the feller buncher has been carefully inspected and checked prior to shipment from manufacturer, it is recommended that the unit be thoroughly inspected.

Check all bolts for tightness and remove all shipping tags, bags, skids, and blocking.

Remove any masking materials affixed during painting. Inspect equipment to verify that nameplates and all safety warning, caution signs and decals provided with the equipment are in place and clearly visible.

Visually inspect the feller buncher before each start up. Check for loose or missing parts and any damage that may have occurred during moving or shipping.

Review all skidsteer pre-start instructions, and ensure that all recommended steps and procedures have been followed.

4.2 Hydraulic Connections

⚠ WARNING

Pressurized fluids can penetrate the skin.

Disconnect and lock out power source before disconnecting and/or connecting hydraulic hoses.

The feller buncher is equipped with three hoses, pressure, return and case drain. Hydraulic couplers are not provided with the feller buncher.

You must install couplers and connect your skidsteer pressure, return and case drain hoses to the feller buncher hoses. Install your couplers to the hoses listed in the following table.

Fitting Size	Hose Description	Qty.
3/4 JIC FM	Pressure & Return	2
1/2 JIC FM	Case Drain	1

Identify the pressure port hose and connect your hoses to the feller buncher hoses.


Maximum allowable case pressure is 100 psi, case drain is required.

4.3 Control (Optional)



4.4 Machine Components

Dashed line indicates item hidden from view unless cover is removed.

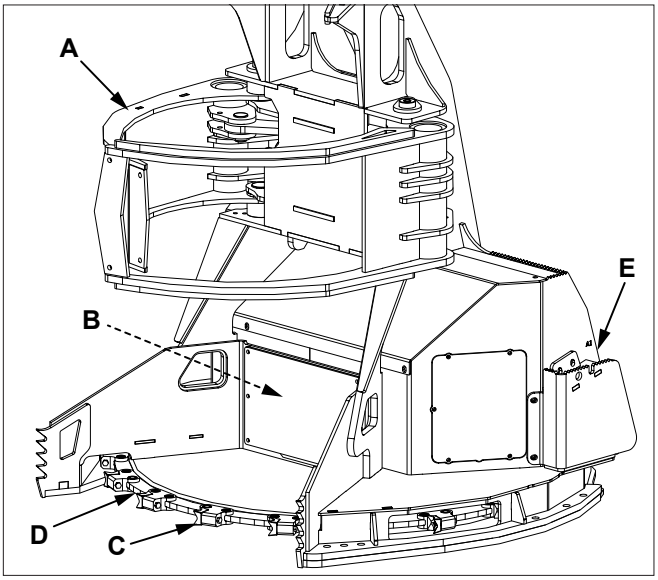

A. Holding Arms
B. Hydraulic Motor
C. Cutting Tooth
D. Rotor
E. Quick Attach

4.5 Attach To Skidsteer

Note: *Use this procedure to connect to skid steer after the initial setup has been performed.*

⚠ WARNING

To prevent injury or machine damage put transmission in park.

Never position yourself between skidsteer and feller buncher.

Only experienced and properly trained operator's may operate skidsteer and feller buncher.

Read and follow all safety instructions.

1. Attach feller buncher to skid steer. See Operator's Manual.
2. Connect hydraulic hoses. Verify hydraulic hoses are clear of pinch areas and moving parts.
3. Connect control box to skidsteer 12 volt power supply, or connect 14 or 8 pin auxiliary plug.
4. Move to a clear open area to test functions.
5. Check operation and verify there are no leaks.

4.6 Detach From Skidsteer

WARNING

Prevent serious injury or death caused by unexpected movement:

1. **Park skidsteer on a level surface.**
2. **Lower feller buncher to ground.**
3. **Engage skidsteer parking brake.**
4. **Shut off engine and remove key.**
5. **Rotor can spin for up to 5 minutes after turning off flow and shutting down skidsteer.**

1. Park skidsteer on a level surface.
2. Lower feller buncher to the ground.
3. Shut off engine and remove key.
4. Disconnect hydraulic hoses.
5. Disconnect electrical connector.
6. Detach skidsteer from feller buncher. See skidsteer Operator's Manual.

4.7 Transporting

1. Verify all reflectors and Slow Moving Vehicle (SMV) sign are visible.
2. Raise feller buncher slightly off ground.
3. Travel at a reasonable and safe speed.

4.8 Operation

Operate all functions in an open area with skidsteer at idle to get a good feel for the controls.

Run throttle only at half speed for first time users.

WARNING

Always stop engine and remove key before leaving operators seat.

WARNING

Prevent serious injury or death.

It is recommended that the operating unit be equipped with a forestry guard to protect the operator.

WARNING

Prevent serious injury or death caused by unexpected movement:

1. **Park skidsteer on a level surface.**
2. **Lower feller buncher to ground.**
3. **Engage skidsteer parking brake.**
4. **Shut off engine and remove key.**
5. **Rotor can spin for up to 5 minutes after turning off flow and shutting down skidsteer.**

⚠ WARNING

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the State of California to cause cancer.

Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection. For more information go to www.P65Warnings.ca.gov/wood.

⚠ WARNING

Prevent serious injury or death.

Never operate feller buncher within 300 ft (92 m) of any person.

On steep terrain, fell trees while traveling up hill.

Do not exceed rated cutting, accumulating or carrying capacities of skidsteer and feller buncher.

Cut stumps as short as possible.

Do not open holding arms until trees are leaning away from skidsteer.

Do not allow riders.

⚠ WARNING

Wear an approved dust mask or respirator.

Follow local, state and federal regulations.

1. Attach feller buncher to skidsteer. See Attach/ Detach in this section.
2. If equipped with a control box, move switch to select holding arms.
3. Operate hydraulics to open holding arms.
4. Position feller buncher so rotor is close to tree and as low to the ground as possible. Position with the head tilted slightly forward (about 5°). This will push the top of the tree away slightly preventing saw jam.
5. Operate hydraulics to start rotor.
6. Move forward into tree while closing holding arms to hold cut tree. Move forward into tree while closing holding arms to hold cut tree.
7. Move to drop site, tilt head forward and open holding arms to drop trees.

4.9 Hydraulic Adjustments

WARNING

Prevent serious injury or death caused by unexpected movement:

1. **Park on a level surface.**
2. **Lower feller buncher to ground.**
3. **Engage parking brake.**
4. **Shut off engine and remove key.**
5. **Rotor can spin for up to 5 minutes after turning off flow and shutting down skidsteer.**

1. Park skidsteer on a level surface
2. Lower feller buncher to the ground.
3. Engage parking brake, shut off engine and remove key.

(A) Flow Adjust - Adjusting the flow determines how much oil is sent to cylinder. Turning in slows down the cylinder, turning out speeds up the cylinder.


Typical adjustment is 2 turns out from closed position. To adjust, hold hex screw with hex wrench and loosen lock nut. Turn hex screw 1/4 turn increments and hold in position while tightening lock nut. Test operation and adjust again if desired.

(B) Pressure relief is factory set to 3000 psi (207 bar).


Typical adjustment is 2 turns out from closed position. To adjust, hold hex screw with hex wrench and loosen lock nut. Turn hex screw 1/4 turn increments and hold in position while tightening lock nut.

The main pressure gauge will show the attachment relief when the cylinder is dead-ended. If relief is opened too far, the arms will have less force. If relief is closed to far, the pressure will be higher then the skidsteer pressure which will result on oil blowing through the zero-leak relief and other things not working properly.

Test operation and adjust again, to make sure the setting at least 500 psi (35 bar) lower then the skidsteers factory rated pressure.

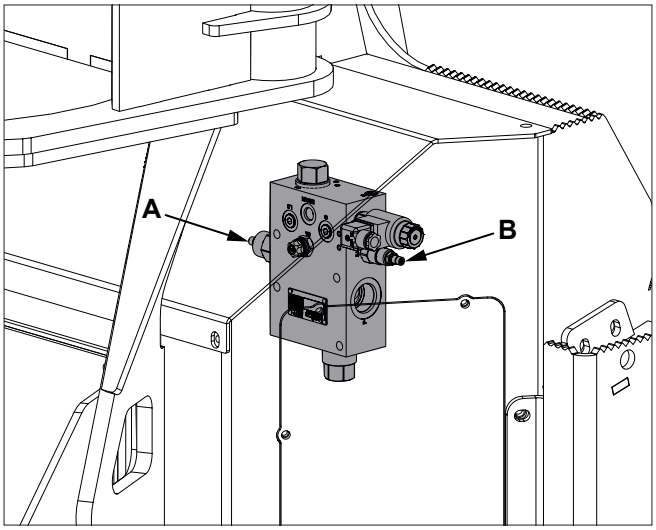

D006586 Valve

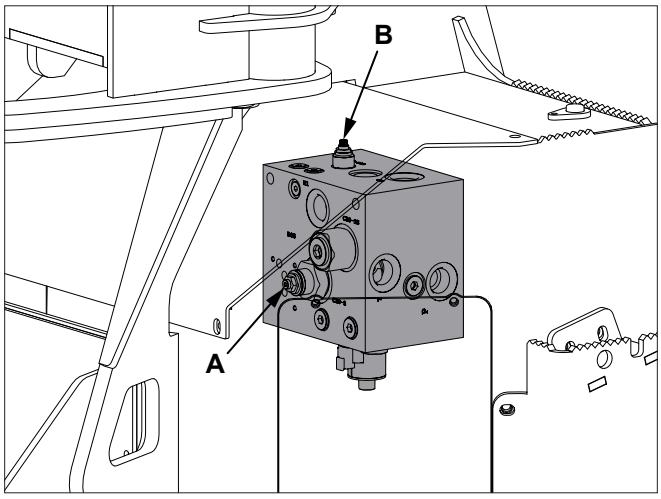

D008163 Valve

Note: *Skidsteers with high/low hydraulic flow switching capability may need a jumper wire on the pin 14 plug to keep the skidsteer at high flow.*

Contact your skidsteer dealer or Baumalight dealer for more information.

5 SERVICE AND MAINTENANCE

We design many of our products using industry-standard parts that are widely available from local supply stores.

Many replacement parts such as bearings, belts, seals, touch-up paint and cutting teeth can often be found through local suppliers, not just from Baumalight.




5.1 Lubrication


WARNING

Prevent serious injury or death caused by unexpected movement:

1. **Park skidsteer on a level surface.**
2. **Lower feller buncher to ground.**
3. **Engage skidsteer parking brake.**
4. **Shut off engine and remove key.**
5. **Rotor can spin for up to 5 minutes after turning off flow and shutting down skidsteer.**

1. Pump grease into all pivot point lubrication fittings until adequately lubricated.

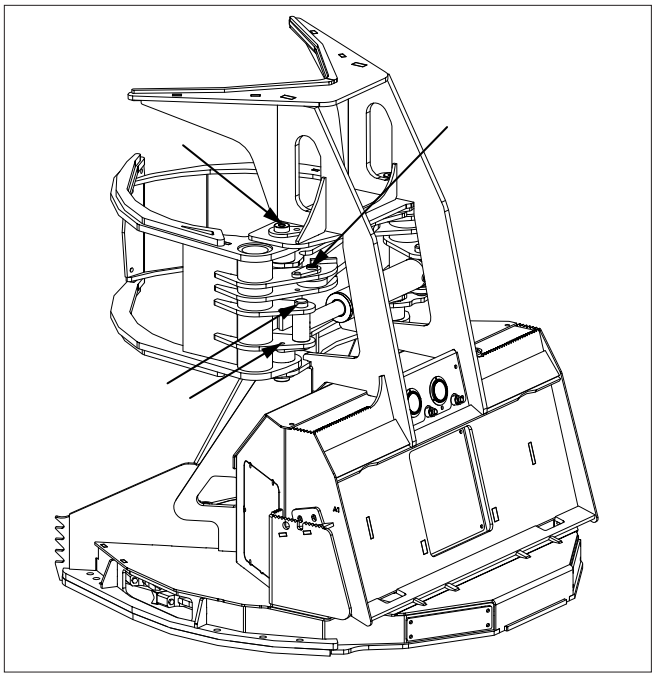

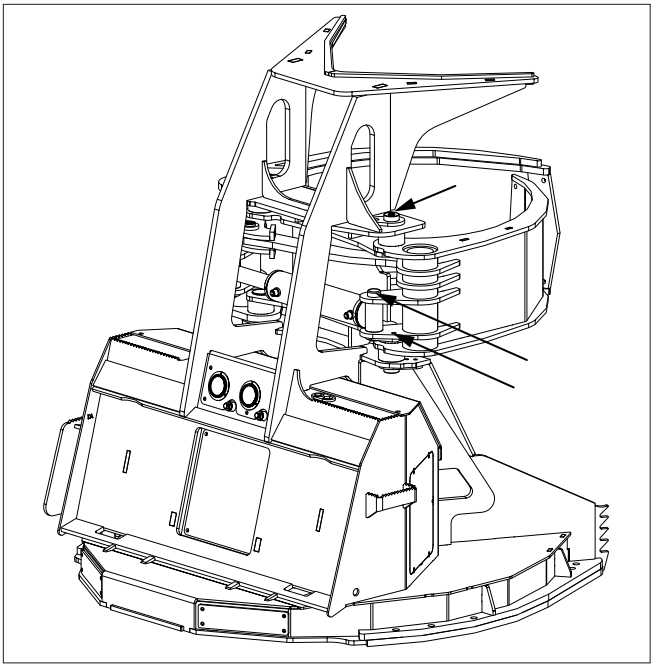

5.2 Inspect Hoses

WARNING

Prevent serious injury or death caused by unexpected movement:

1. **Park skidsteer on a level surface.**
2. **Lower feller buncher to ground.**
3. **Engage skidsteer parking brake.**
4. **Shut off engine and remove key.**
5. **Rotor can spin for up to 5 minutes after turning off flow and shutting down skidsteer.**

WARNING

Pressurized fluids can penetrate the skin.

Hydraulic hoses can fail from age, damage and exposure.

Use body and face protection while searching for leaks. A tiny, almost invisible leak can penetrate the skin, thereby requiring immediate medical attention.

Use wood or cardboard to detect hydraulic leaks, never use your hands.

Inspect hydraulic hoses for damage and wear. Replace damaged or worn hoses before operating.

5.3 Inspect And Rotate Or Replace Cutting Teeth

WARNING

Prevent serious injury or death caused by unexpected movement:


1. **Park skidsteer on a level surface.**
2. **Lower feller buncher to ground.**
3. **Engage skidsteer parking brake.**
4. **Shut off engine and remove key.**
5. **Rotor can spin for up to 5 minutes after turning off flow and shutting down skidsteer.**

Check teeth bolt tightness every 10 minutes for the first hour, then every 6 hours of use.

Check cutting edge (A) of teeth for wear and damage every 6 hours of use. Keep cutting teeth in good condition. Unit will cut faster and remaining teeth will last longer if broken teeth are replaced.

Each tooth can be rotated 180° from its original position before replacement is necessary.

1. Park skidsteer and feller buncher on a level surface.
2. Lower feller buncher to the ground.
3. Shut off engine and remove key.
4. Inspect cutting teeth for damage and wear. Once cutting edges (A) is worn, remove bolt, pull tooth out and rotate tooth 180° so new edge is on outside (cutting) edge.
5. Replace individual teeth as needed.
6. Install tooth and tighten bolt to 37 lb-ft (50 Nm) of torque.

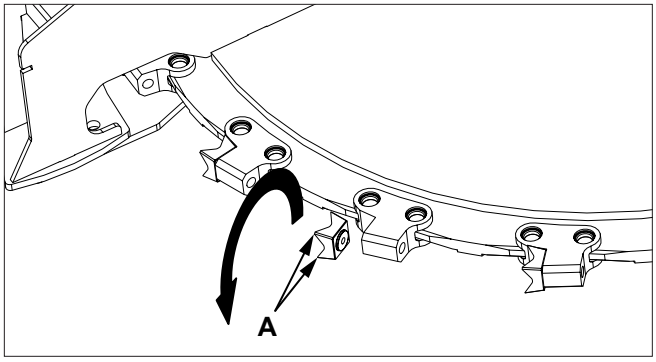

5.4 Remove And Install Rotor

WARNING

Prevent serious injury or death caused by unexpected movement:

1. **Park skidsteer on a level surface.**
2. **Lower feller buncher to ground.**
3. **Engage skidsteer parking brake.**
4. **Shut off engine and remove key.**
5. **Rotor can spin for up to 5 minutes after turning off flow and shutting down skidsteer.**

1. Park skidsteer on a level surface.
2. Lower feller buncher to the ground.
3. Shut off engine and remove key.
4. Disconnect hydraulic hoses.
5. Disconnect electrical connector.
6. Detach skidsteer from feller buncher. See skidsteer Operator's Manual.


WARNING

Crushing and severing hazard.


Feller buncher weight is 2350 lbs (1066 kg).

Use a properly rated lifting device to lay feller buncher down for rotor removal.

7. Connect a properly rated lifting device to feller buncher and lay machine down on the quick attach side.

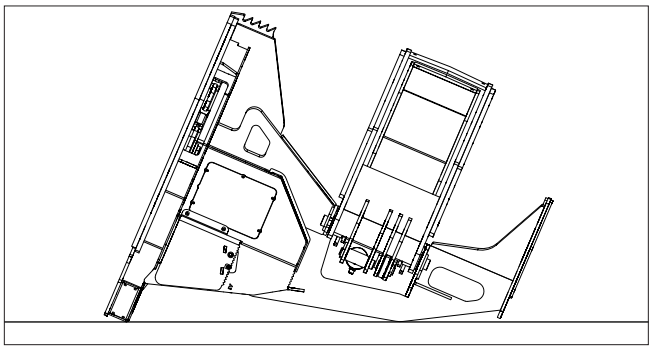

8. Remove covers (A) and (B).

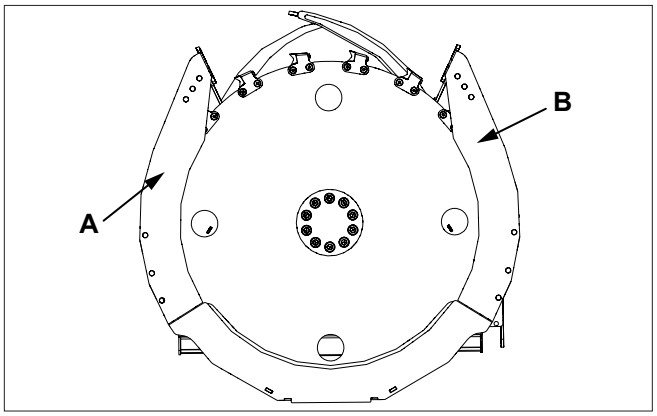


WARNING

Crushing and severing hazard.

Rotor weight is 310 lbs (141 kg).

Use a properly rated lifting device to lift rotor.

9. Attach a properly rated lifting device to holes (C) in rotor. Apply slight tension on lifting device.
10. Remove ten socket head cap screws (D) and plate (E). Carefully remove rotor with lifting device.

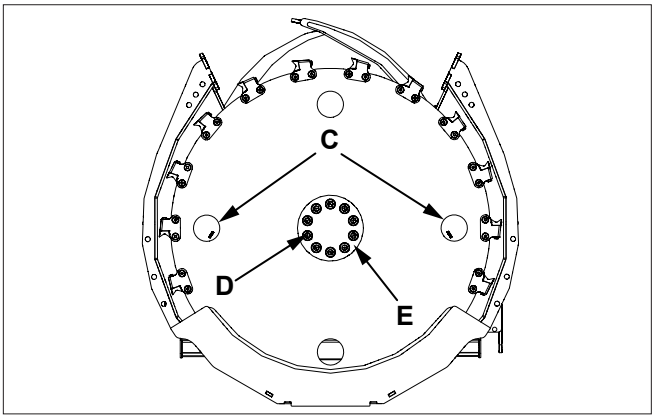

11. Position rotor on motor shaft with lifting device.
12. Install plate (E).
13. Apply a medium strength thread lock to cap screw (D) threads.
14. Install socket head cap screws (D).
15. Tighten caps screws (D) to 188 lb-ft (255 Nm) of torque.
16. Remove rotor lifting device.
17. Position feller buncher in the upright position with lifting device.
18. Remove lifting device.

5.5 Zero Leak Case Drain Relief Valve

The feller buncher is equipped with a case drain line that is to be routed to the skidsteer hydraulic reservoir.

It is normal for a hydraulic motor to have a slight amount of internal leakage.

The case drain line will allow this internal leakage to be returned to the reservoir, preventing excessive pressure on the motor seal.

If the case drain line is not connected or becomes obstructed, the zero leak relief valve will vent the pressurized hydraulic oil to the atmosphere. The zero leak relief valve will self reset after hydraulic pressure reduced.

⚠ WARNING

Pressurized fluids can penetrate the skin.

Keep bystanders away from machine during operation.


A tiny, almost invisible leak can penetrate the skin, thereby requiring immediate medical attention.

If hydraulic oil is coming out of the zero leak relief valve (A), shut down machine immediately. Inspect the case drain line connection and lines. Contact your dealer if case drain lines and connection are good.

If hydraulic oil is coming out of vent (B), shut down machine immediately. Hydraulic oil coming out of vent indicates motor shaft seal is leaking. Contact your dealer.

NOTICE
Environmental hazard. **Clean up any spilled hydraulic oil immediately.**

A properly installed case drain protected by a zero leak relief valve will save the work of replacing the motor shaft seal and also improve the efficiency of your hydraulic system.

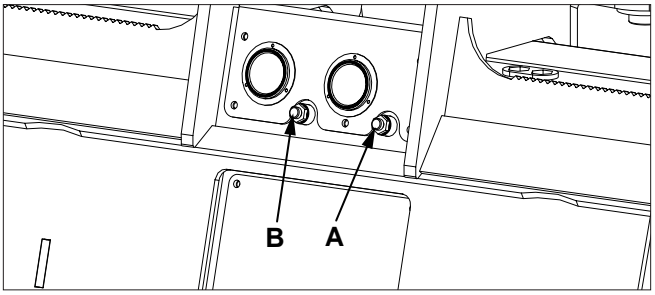

6 TROUBLESHOOTING

PROBLEM	CHECK	SOLUTION
Holding arm does not close.	Material jammed in arm.	Remove material.
	Low oil.	Check oil level in skidsteer. Add if necessary.
	Not enough oil flow.	Check flow control on skidsteer. See your dealer.
Shear does not have much power.	Low oil.	Check oil level in skidsteer. Add if necessary.
	Oil filter plugged.	Replace skidsteer oil filter.
	Relief valve not set properly.	Set relief valve. Pressure should be 3,000 psi.
	Not enough oil pressure.	Check hydraulic pressure on skidsteer. See your dealer.
Rotor does not spin.	Rotor jammed.	Remove material from rotor / teeth.
	Verify hydraulic hoses are connected.	Connect hoses.
Skidsteer is not able to lift feller buncher.	Skidsteer is too small.	Use proper size skidsteer.
Excessive vibration.	Cutting teeth worn or missing. Debris packed on rotor / teeth.	Replace worn, broken or missing cutting teeth. Remove debris.
Holding arms move slow or stutter when fully extended or retracted.	On-board pressure relief valve is set higher than machine relief valve.	Check hydraulic pressure relief. See your dealer.
Hydraulic oil coming out of zero leak relief valve.	Case drain connector for proper connection and line for obstructions or pinched line.	Connect case drain line if not connected. Replace line if damage, obstructed or pinched.
	Combo coupler seals.	Combo coupler seals may be leaking, allowing pressurized fluid to escape to the case drain line.
Hydraulic oil coming out of shaft seal vent.	Motor shaft seal is leaking.	Contact your dealer.

7 STORAGE

7.1 Storing

1. Store feller buncher in a dry place.
2. Clean feller buncher thoroughly. Dirt will draw moisture and cause rust.
3. Check for loose or missing hardware.
4. Paint parts as necessary.

7.2 Remove From Storage

1. Review Operator's Manual.
2. If parts have been replaced, verify they operate properly.

8 WARRANTY

To view the warranty, scan the QR Code below, or go to Baumalight.com. From the Support drop down, click on Support, then select Feller Buncher. Select Product Warranty.

For parts, specifications and the latest machine information please visit our website.

www.baumalight.com

MTB MFG INC.
CORPORATE HEADQUARTERS
4575 Powell Rd.,
Wallenstein, Ontario Canada
N0B 2S0
www.baumalight.com