
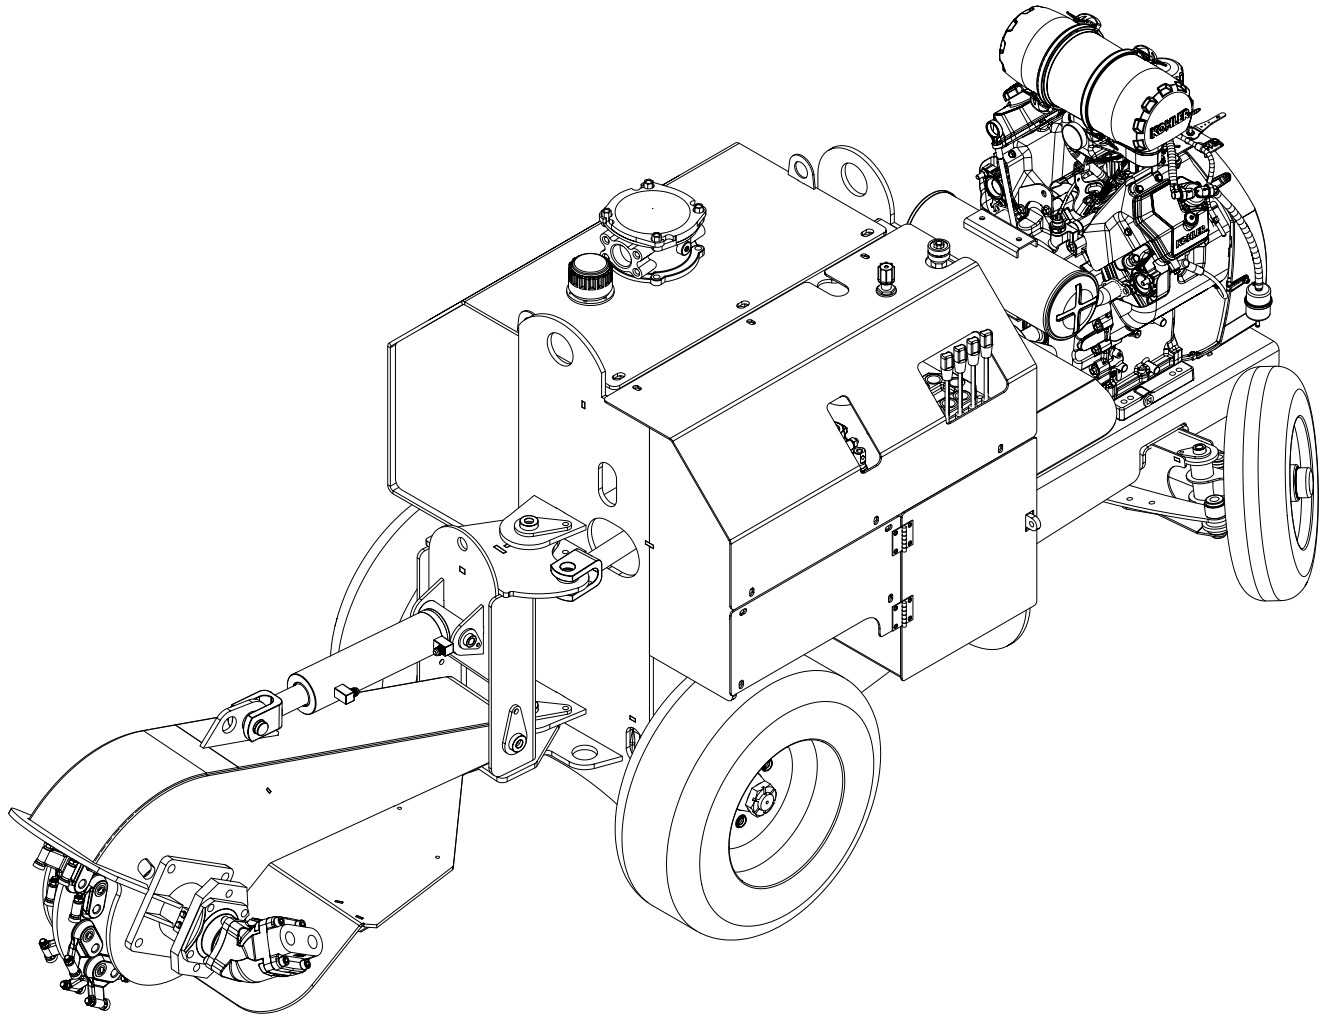


BAUMALIGHT™

HGW30 Self-Propelled Stump Grinder

OPERATOR'S MANUAL

Issue Date: October 2026

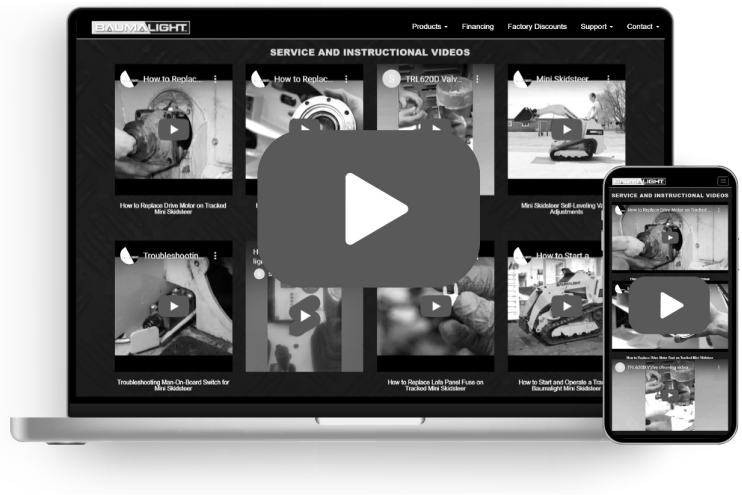

Service And Instructional Videos

Find online at baumalight.com/support

Following is a list of videos and documents available on Baumalights website and also on YouTube to help and enhance maintaining the stump grinder. The list below was current at the time this manual was issued. Additional content may be available.

Activity ID Number	Activity Name	Description	Item Available
318	Hydraulic Motor.	Breaking In Replacement Hydraulic Motor.	Video
224	Replacing Teeth.	When To Replace H3000 Teeth.	Video
164	Valve Adjustment.	Adjusting Cutting Pressure.	Video
157	Change Hydraulic Filter.	Hydraulic Filter Change Instructions.	Document
104	Remove Seal.	Remove Seal On Motor Or Load Adapter.	Video
123	Zero-Leak Relief Valve.	Demonstrating And Troubleshooting Zero-Leak.	Video
142	Replace Motor Shaft Seal.	Replace Shaft Seal On Piston Motor.	Video
151	Wheel Motor Seal Replacement.	Wheel Motor Seal Instructions.	Document
477	Communicating Measurements.	Why Not To Send Pictures Of Measuring Tapes To Communicate Measurements.	Video
435	Hydraulic Cylinder.	Replacing Seals On Hydraulic Cylinder.	Video

⚠ WARNING

Breathing engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Always start and operate the engine in a well-ventilated area.

If in an enclosed area, vent the exhaust to the outside.

Do not modify or tamper with the exhaust system.

Do not idle the engine except as necessary.

For more information go to www.P65Warnings.ca.gov.

⚠ WARNING

Batteries, battery posts, battery terminals, and related accessories can expose you to chemicals including lead and lead compounds, which are known to the State of California to cause cancer and birth defects or other reproductive harm.

For more information go to www.P65Warnings.ca.gov.

TABLE OF CONTENTS

1 INTRODUCTION 5
1.1 Overview 5
1.2 Intended Use And Foreseeable Misuse 5
2 SAFETY 6
2.1 Safety Alert Symbol And Safety Words 6
2.2 Operational Hazards 6
Prepare For Emergencies 7
Replace Safety Signs 7
Do Not Allow Riders 8
Lower Operating Speed 8
Avoid Rollover 8
Avoid Powerlines & Underground Utilities 8
Hazards From Modifying Equipment 9
2.3 Maintenance Hazards 11
3 SAFETY SIGNS 12
4 COMPONENTS 15
5 OPERATION 16
5.1 Pre-Operation Check List 16
5.2 Carbide Teeth Break-In 16
5.3 First Time User Tips 17
5.4 Field Operation 18
Operator Controls 18
Grinding A Stump 19
6 SERVICE AND MAINTENANCE 20
6.1 Maintenance 20
6.2 Inspections 21
6.3 Rotate Cutting Teeth 21
6.4 Replace Cutting Teeth 22
6.5 Replace Tooth Holder 22
6.6 Lubrication 23
7 TROUBLESHOOTING 24
8 STORAGE 25
8.1 Storing Stump Grinder 25
8.2 Remove Stump Grinder From Storage 25
9 WARRANTY 26

1 INTRODUCTION

1.1 Overview

Congratulations on your choice of a Baumalight Stump Grinder to complement your stump grinding operation. This equipment has been designed and manufactured to meet the needs of a discriminating buyer for efficient grinding of stumps.

You must read, understand, and follow all instructions in this manual before operating, adjusting or servicing this machine.

Information provided in this manual was current as of the issue date.

Information furnished in this manual does not include all of the details of design, production, or variations of equipment. It does not cover all the possible contingencies, which may arise during operation or maintenance.

Should special issues arise, or further information be desired, contact your dealer.

This manual covers the Baumalight HGW30 Stump Grinder. Use the Table of Contents as a guide to locate required information.

Keep this manual handy for frequent reference and to pass on to new operators or owners. Contact your Baumalight dealer if you need assistance, information or additional copies of the manuals.

When this machine is worn out and no longer in use, it should be returned to the retailer or other party for recycling.

This operator's manual does not replace, nor does its use discharge the operator from observing all safety codes or operating limitations as well as any applicable federal, state, provincial or local regulations.

1.2 Intended Use And Foreseeable Misuse

The Stump grinder is designed to be used by experienced operators, trained in the safe operation of an excavator and trained in the hazards related to using the stump grinder and the safe use of the stump grinder for the intended purpose. Operators will require personal protective equipment to reduce the risk from some hazards that cannot be completely eliminated or controlled by the design of the tool.

Care is required to ensure that the stump grinder will not come across metallic objects, stones or other materials.

Stump grinder is not designed for use in hazardous atmospheres where there is a risk of fire or explosion due to flammable gases or vapors. Use in hazardous, explosive atmospheres is prohibited.

Serious injury or death of the operator or bystanders may be caused if the stump grinder is misused. Misuse may also cause damage to the machine carrying the implement.

2 SAFETY

2.1 Safety Alert Symbol And Safety Words

You must read, understand and follow the instructions given by the operating unit manufacturers, as well as the instructions in this manual.

The safety information in this manual is denoted by the safety alert symbol:



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

The level of risk is indicated by the following signal words:

DANGER

DANGER - Indicates a hazardous situation, which, if not avoided, WILL result in death or serious injury.

WARNING

WARNING - Indicates a hazardous situation, which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION - Indicates a hazardous situation, which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE - Indicates a situation that could result in damage to the equipment or other property.

2.2 Operational Hazards

WARNING

Prevent serious injury or death.

Read and understand this manual before operating the stump grinder.

Always stop engine and allow rotor to stop before approaching rotor.

Never allow anyone near stump grinder during operation.

Travel at a safe speed.

WARNING

Prevent serious injury or death from moving parts.

Moving parts can crush and dismember.

Do not operate without guards and shields in place.

Lockout engine controls before adjusting or performing maintenance.

WARNING

Use stump grinder only for the designed applications.

Any other use may result in personal injury, damage to equipment and may void the warranty.

⚠ WARNING

Prevent serious injury or death.

Allow only properly trained and qualified personnel to operate this equipment.

⚠ WARNING

Protect from flying debris.

Wear proper safety glasses, goggles, or a face shield to protect from flying debris.

⚠ WARNING

Prevent serious injury or death.

Engine exhaust contains carbon monoxide. Carbon monoxide is an odorless gas that can cause death.

Avoid any areas or actions that expose you or others to carbon monoxide.

Never refuel a running engine or refuel near ignition sources.

Carefully read all safety messages in this manual and on equipment safety signs. Keep safety signs in good condition and replace missing or damaged safety signs.

New equipment components and repair parts must include the current safety decal.

Learn how to properly operate equipment. NEVER operate or work around this equipment without proper instruction, while fatigued or under the influence of alcohol, prescription or non-prescription medication or if feeling ill.


Keep your equipment in proper working condition.

Know the regulations and laws that apply to you and your industry. This manual is not to replace any regulations or laws. Additional information may be found at: www.asae.org or www.osha.gov.

If you do not understand any part of this manual, contact your Baumalight dealer.

Prepare For Emergencies

- Be prepared in case of emergencies.
- Keep a fire extinguisher and first aid kit close to the machine.
- Keep emergency phone numbers close to your phone.
- Know your address so emergency services can locate you if an emergency arises.

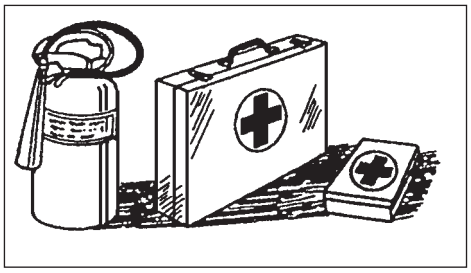

Replace Safety Signs

- Replace missing or damaged safety signs.
- Safety signs are identified in Section 3 of this manual.
- Replacement safety signs are available from your Baumalight dealer.

Do Not Allow Riders

- NEVER lift or carry anyone on the stump grinder.
- NEVER use stump grinder as a work platform.
- NEVER allow passengers on the stump grinder.

Lower Operating Speed

- Keep stump grinder low and move at slow speeds on rough or uneven terrain.

Avoid Rollover

The equipment may rollover, resulting in death or serious injury. To help prevent rollover:

- Travel at a slow speed.
- Avoid sharp turns & sudden movement on slopes.
- Carry stump grinder close to the ground.
- Avoid holes, ditches and other obstructions which may cause equipment to rollover.
- Use caution when operating on slopes and do not operate on excessively steep slopes.
-

Avoid Powerlines & Underground Utilities

⚠ DANGER

Prevent electrocution.

Death or serious injury can result if equipment comes near or contacts power lines.

Electrocution can occur without direct contact.

DO NOT leave the operator's seat if any part of the equipment contacts electric lines or cables.

Raised Rotor

⚠ WARNING

Crushing hazard.

Raised, unsupported rotor can fall, resulting in death or serious injury.

Never enter the area under a raised rotor.

A raised rotor can lower unexpectedly, resulting in death or serious injury.

NEVER enter area under a raised rotor.

Lower rotor to ground, engage parking brake, shut off engine and lockout engine controls before servicing

Avoid High Pressure Fluids

⚠ WARNING

Pressurized fluids can penetrate the skin.

Hydraulic hoses can fail from age, damage and exposure.

Use body and face protection while searching for leaks. A tiny, almost invisible leak can penetrate the skin, thereby requiring immediate medical attention.

Use wood or cardboard to detect hydraulic leaks, never use your hands.

Escaping fluid under pressure can penetrate the skin causing serious injury.

Prevent the hazard by relieving pressure before connecting or disconnecting hydraulic lines. Verify all connections are tight before applying pressure.

Search for leaks with a piece of cardboard or wood.

Protect hands and body from high pressure fluids. If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or serious infection may result.

Doctors unfamiliar with this type of injury should reference a knowledgeable medical source.

Avoid Loud Noise

⚠ WARNING

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Hazards From Modifying Equipment

Do not make any alterations to your stump grinder. Altering the equipment may cause unsafe conditions and may void the manufacturer's warranty.

Avoid Wood Dust Inhalation

⚠ WARNING

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the State of California to cause cancer.

Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection. For more information go to www.P65Warnings.ca.gov/wood.

⚠ WARNING

Wear an approved dust mask or respirator.

Follow local, state and federal regulations.

Avoid High Pressure Fluids

⚠ WARNING

Pressurized fluids can penetrate the skin.

Hydraulic hoses can fail from age, damage and exposure.

Use body and face protection while searching for leaks. A tiny, almost invisible leak can penetrate the skin, thereby requiring immediate medical attention.

Use wood or cardboard to detect hydraulic leaks, never use your hands.

Escaping fluid under pressure can penetrate the skin causing serious injury.

Prevent the hazard by relieving pressure (See Excavator Operator's Manual.) before connecting or disconnecting hydraulic lines. Verify all connections are tight before applying pressure.

Search for leaks with a piece of cardboard or wood.

Protect hands and body from high pressure fluids. If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or serious infection may result.

2.3 Maintenance Hazards

Before servicing, park machine on a firm and level surface, remove key, set parking brake and place a “Do Not Operate” tag on control panel. Read and understand this manual. If you do not understand any part of the manual, contact your Baumalight dealer.

Always wear face and/or eye protection, safety shoes, and other protective equipment appropriate for the job.

Do not make unauthorized modifications. Contact your Baumalight dealer before you weld, cut/drill holes, or make any other modifications.

WARNING

Moving parts can crush and cut.

Keep clear of moving components.

Follow lockout procedure before servicing.

WARNING

Entanglement hazard.

Keep clear of moving components.

Wear proper protective equipment appropriate for the job.

WARNING

Burn hazard.

Hot and high pressure hydraulic oil.

Allow oil to cool before servicing.

WARNING

Crushing hazard.

Before performing inspections, service or maintenance:

Park machine on firm, level surface.

Engage parking brake.

Turn engine off and remove key.

Place “Do Not Operate” tag on control panel.

WARNING

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the State of California to cause cancer.

Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection. For more information go to www.P65Warnings.ca.gov/wood.

WARNING


Wear an approved dust mask or respirator.


Follow local, state and federal regulations.

3 SAFETY SIGNS

The two and four panel safety decals are pictorial and have a yellow background. The panel with a triangle indicates the potential hazard. The panel without a triangle indicates how to avoid the hazard.

If any of the decals are missing, are damaged, or if you do not understand the decal, please contact your dealer.

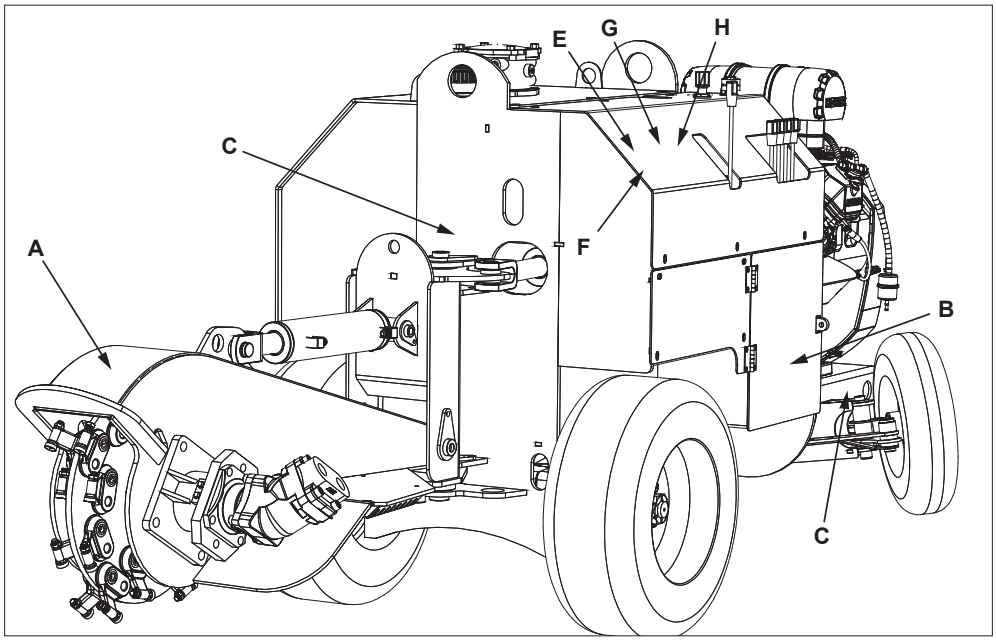

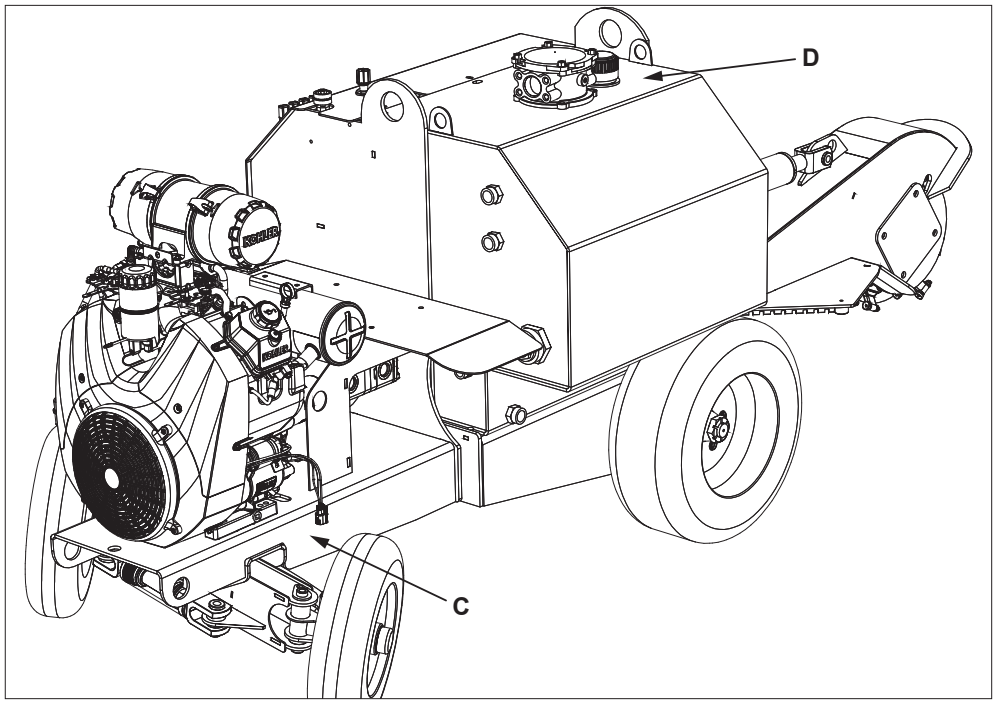


A. D005365 ⚠ WARNING - Rotating blade hazard. Keep back while machine is operating. Wait for blade to stop before approaching machine.




B. D005267



C. D005039 ⚠ Pinch hazard. Keep back while machine is operating.

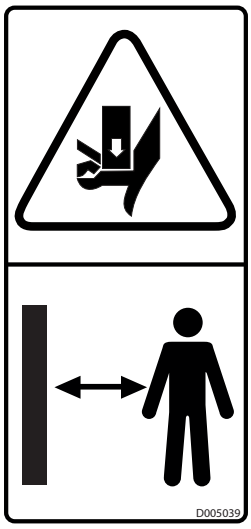

D. D005294

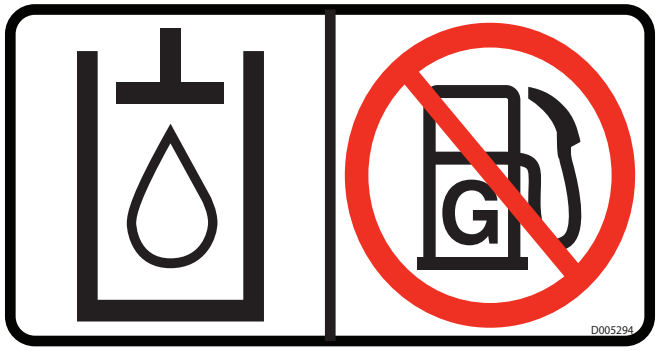

E. D005126 ⚠ WARNING - Pressurized fluid hazard. Pressurized fluids can penetrate the skin. Do not check for leaks with your hands. Keep back a safe distance when pressurized.




F. D005262 ⚠ WARNING - P65 warning information.


⚠ **WARNING:** This product can expose you to chemicals including 1,3-Butadiene and lead, which are known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

D005262

G. D005125 ⚠ WARNING - Read and understand safety signs on the machine and operating instructions in this manual before operating machine.

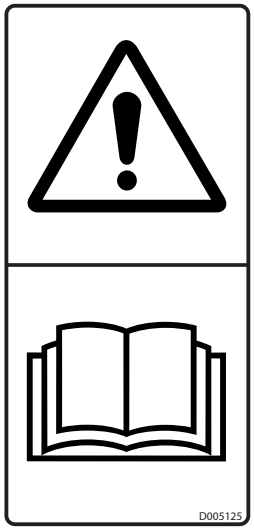


H. D005517 ⚠ WARNING - Remove key before servicing.

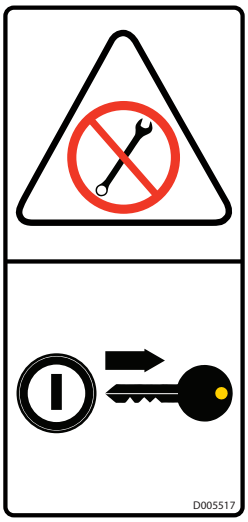

4 Components

A. Rotor Raise/Lower Hydraulic Cylinder
B. Hydraulic Oil Reservoir Fill
C. Hydraulic Oil Filter
D. Hydraulic Oil Reservoir
E. Traction Control
F. Swing And Drive Speed Control
G. Engine
H. Engine Fuel Tank
I. Grinding & Driving Controls
J. Rotor Control
K. Rotor Swing Hydraulic Cylinder
L. Debris Guard
M. Hydraulic Motor
N. Rotor

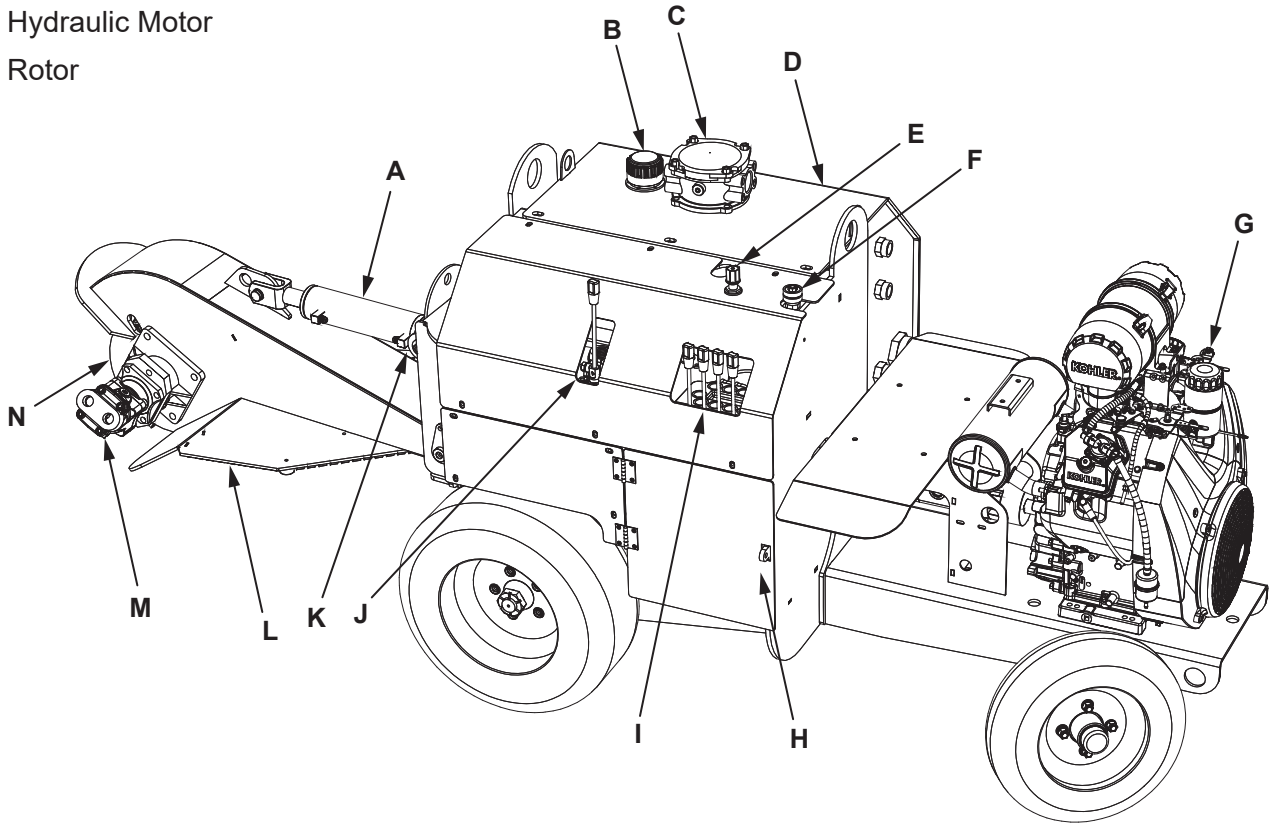

5 OPERATION

5.1 Pre-Operation Check List

⚠ Keep bystanders, livestock, pets, etc away from work area.

⚠ Always wear protective equipment appropriate for the job.

⚠ Do not operate, work on or around this machine while under the influence of alcohol, drugs or if feeling ill.

⚠ Keep clear of moving machinery at all times.

⚠ Stop excavator engine before leaving operators area.

⚠ It is your responsibility to operate this equipment safely. You must be familiar with the equipment and all safety practices before use.

⚠ Do not allow untrained or unqualified people to operate this equipment.

Perform the following checks prior to operation.

- Review and understand this manual and engine operators manual.
- Verify safety decals are installed and legible. Replace if damaged or missing.
- Verify that all hardware is tight.
- Inspect hoses and fittings for wear, damage and leaks. Replace damaged or leaking hoses before use.
- Verify hydraulic oil is at full level on sight glass
- Verify that local utilities have marked all underground utilities.

5.2 Carbide Teeth Break-In

During the first few hours of use, avoid hitting stones as much as possible to allow the carbide teeth to wear slightly. This can be done by keeping the cutting wheel above ground level. Brand new carbide tips are razor sharp and can chip and shatter easily when they hit hard objects. Once the razor sharpness has worn away, the tips do not chip as easily. Observing these precautions will extend the life of the carbide teeth and reduce operating expenses.

The teeth bolts must be retightened every ten minutes for the first hour of use on a new stump grinder.

5.3 First Time User Tips

First, operate all functions in a clear area with throttle at low idle to get a good feel for the controls before you actually move into any brush.

Slow cutting speed if pressure surges up close to max psi. Doing this will greatly reduce blade stoppage.

Run throttle at half speed for first time users.

Move the stump grinder slowly until you have a better feel how much the unit can take.

The machine is equipped with a front push bar to push brush or small trees over. This will allow the stump grinder teeth to contact the lower portion of the brush and the blade to cut it off.

Each operator must experiment to find a technique that works for them in their application.

⚠ WARNING

Always turn off excavator and disengage hydraulic drive before getting off the seat and approaching the blade.

⚠ WARNING

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the State of California to cause cancer.

Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection. For more information go to www.P65Warnings.ca.gov/wood.

⚠ WARNING

Wear an approved dust mask or respirator.

Follow local, state and federal regulations.

5.4 Field Operation

WARNING

Prevent serious injury or death.

Keep clear of moving machinery.

WARNING

Prevent serious injury or death.

Engine exhaust contains carbon monoxide. Carbon monoxide is an odorless gas that can cause death.

Avoid any areas or actions that expose you or others to carbon monoxide.

WARNING

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the State of California to cause cancer.

Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection. For more information go to www.P65Warnings.ca.gov/wood.

WARNING

Wear an approved dust mask or respirator.


Follow local, state and federal regulations.

WARNING

Never operate stump grinder when other people are in the vicinity. Debris can be thrown several feet from cutting area.

Keep all shields in place.

Operator Controls

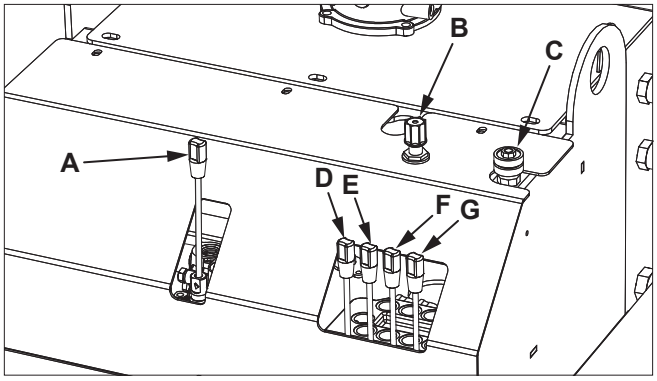

A. Rotor Engage/Disengage
B. Traction Control
C. Swing & Drive Speed Control
D. Rotor Swing Control
E. Rotor Lift Control
F. Steering Control
G. Drive Control

Grinding A Stump

WARNING

Prevent serious injury or death.

Keep clear of moving machinery.

1. Start stump grinder engine. See OEM engine manual for safety, prestart and operational information.
2. Set engine speed at high idle.
3. Adjust stump grinder swing speed. Rotate swing & drive speed control (C) counter clockwise to slow setting. It is recommended to start at the slow setting and adjust speed up as desired.
4. Rotate traction control (B) fully clockwise to lock drive wheels together. Rotate control counter clockwise to allow steering.
5. If the stump is on a grade, position stump grinder lower on the grade with the cutting wheel on the stump grinder higher up the grade.
6. Position stump grinder up to the front edge of the stump using levers (F) and (G).
7. Check position of the stump grinder to the stump. Verify stump grinder is positioned at the edge of the stump that is closest to the stump grinder.
8. Verify rotor is close to, but not touching stump. Adjust rotor height with lift control lever (E).
9. Engage rotor with lever (A).
10. Use lift lever (E) and swing lever (D) to direct the rotor. Make the first pass across front edge of stump, moving the cutting wheel from side to side in 3-6 inch passes.
11. Continue to take passes across the front edge of the stump, taking 3-6 inches on each pass.
12. When ground level is reached, continue to grind up to 12 in. (305 mm) below the surface to the bottom of the stump where the roots branch out.
13. Lift rotor and swing it to right or left side. Back the stump grinder up slightly to position the stump grinder beside the new front edge of the stump.
14. Make multiple passes over the front edge of the stump, taking 3-6 inches on each pass.
15. Reposition stump grinder as needed until the entire stump has been removed to below ground level.
16. Follow the roots, taking as much of the larger surface roots as possible. If these are not removed they can, over time, protrude from the ground in areas where there is a heavy freeze/thaw cycle.
17. Move stump grinder away from stump to a flat surface and set engine speed at low idle.
18. Stop stump grinder engine.

6 SERVICE AND MAINTENANCE

6.1 Maintenance

Item	Daily Before Use	Every 4 Hours	Every 30 Hours	Weekly	Every 100 Hours	Every 200 Hours	Every 500 Hours	Every 2000 Hours
Check hoses and fittings for leaks.	•							
Check cutting teeth for wear. Rotate or replace cutting teeth as necessary.		•						
Lubricate pivot point grease fittings.			•					
Check rotor bearings for side-to-side and up/down movement. Replace bearing if movement is found.				•				
Change engine oil filter.					•			
Change engine air filter.					•			
Change engine oil and filter.						•		
Change hydraulic oil filter.							•	
Change hydraulic oil and filter.								•

⚠ WARNING

Moving parts can crush and cut.

Keep clear of moving components.

Lockout operating engine controls before performing inspections or maintenance.

⚠ WARNING

Prevent serious injury or death.

Wear proper protective equipment appropriate for the job.

⚠ WARNING

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the State of California to cause cancer.

Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection. For more information go to www.P65Warnings.ca.gov/wood.

⚠ WARNING

Wear an approved dust mask or respirator.

Follow local, state and federal regulations.

We design many of our products using industry-standard parts that are widely available from local supply stores.

Many replacement parts such as bearings, belts, seals, touch-up paint and cutting teeth can often be found through local suppliers, not just from Baumalight.



6.2 Inspections

Inspect the unit for any buildup of contamination (dirt, stones, etc.).

Check cutting teeth every 4 hours of use. Replace cutting teeth as needed. Unit will cut faster and remaining teeth will last longer if broken teeth are replaced.

Inspect hydraulic hoses for damage and wear.


6.3 Rotate Cutting Teeth


Check cutting teeth every 4 hours of use. Keep cutting teeth in good condition. Unit will cut faster and remaining teeth will last longer if broken or worn teeth are replaced.

Each tooth can be rotated up to two times from its original position before replacement is necessary.

1. Park stump grinder on a level surface.
2. Lower rotor to the ground.
3. Shut off engine and lockout engine controls.
4. Inspect teeth for wear on top edge. Once outside cutting edge is worn, rotate tooth so a new edge is on top (cutting) edge.
5. Loosen locknut (A) on tooth (B) and rotate tooth 1/3 turn. Flat shoulder on tooth will fit against shoulder (C) on tooth holder.
6. Tighten locknut (A) to torque listed below.

H3000 Teeth - 35 lb/ft (47 Nm)
G3000 Teeth - 35 lb/ft (47 Nm)
W3000 Teeth - 25 lb/ft (34 Nm)

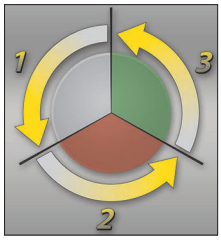

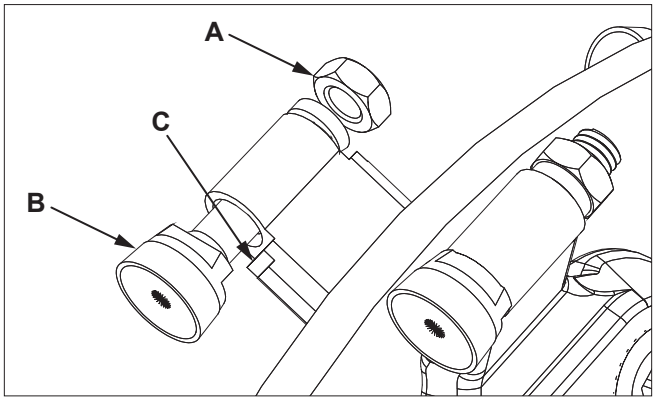


***Note**: Parts breakdown can be found on Baumalight's website. www.baumalight.com*

6.4 Replace Cutting Teeth

1. Park stump grinder on a level surface.
2. Lower rotor to the ground.
3. Shut off engine and remove key.
4. Inspect cutting teeth (B) for damage and wear. Replace individual teeth as needed.
5. Remove locknut (A) and spacer from tooth (B). Install new tooth. Flat shoulder on tooth will fit against shoulder (C) on tooth holder.
6. Install spacer and locknut.
7. Tighten locknut (A) to torque listed below.

H3000 Teeth - 35 lb/ft (47 Nm)
G3000 Teeth - 35 lb/ft (47 Nm)
W3000 Teeth - 25 lb/ft (34 Nm)

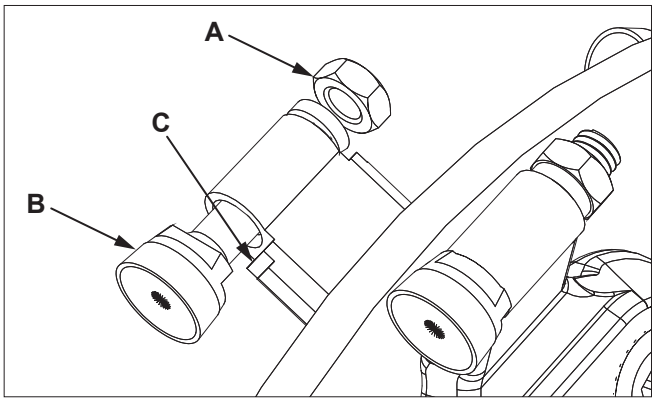


***Note**: Parts breakdown can be found on Baumalight's website. www.baumalight.com*

6.5 Replace Tooth Holder

1. Park stump grinder on a level surface.
2. Lower rotor to the ground.
3. Shut off engine and remove key.
4. Inspect tooth holders (A) for damage and wear. Replace individual tooth holders as needed.
5. Remove tooth from tooth holder.
6. Remove mounting hardware on tooth holders. Install new tooth holder and tighten mounting hardware.
7. Install tooth into new tooth holder.
8. Tighten locknut to torque listed below.


H3000 Teeth - 35 lb/ft (47 Nm)
G3000 Teeth - 35 lb/ft (47 Nm)
W3000 Teeth - 25 lb/ft (34 Nm)

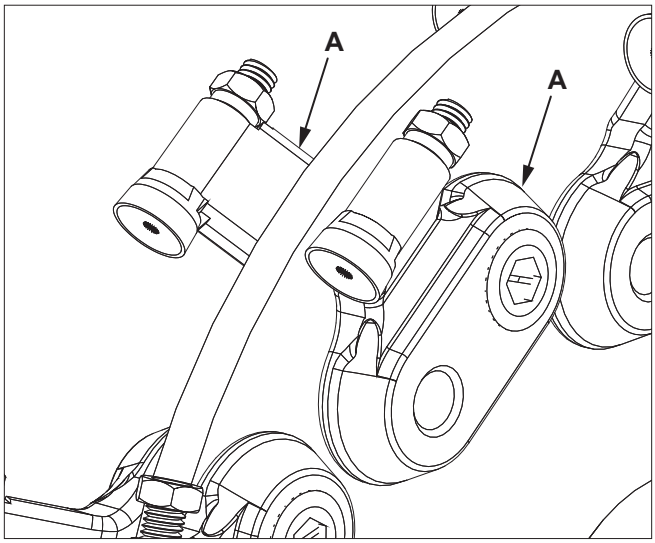


***Note**: Parts breakdown can be found on Baumalight's website. www.baumalight.com*

6.6 Lubrication


1. Lubricate swing pivot pins (A), (B), (C) and base end pin of cylinder (D) every 30 hours.
2. Lubricate raise/lower pivot pin (E) and cylinder pins (F) and (G) every 30 hours.

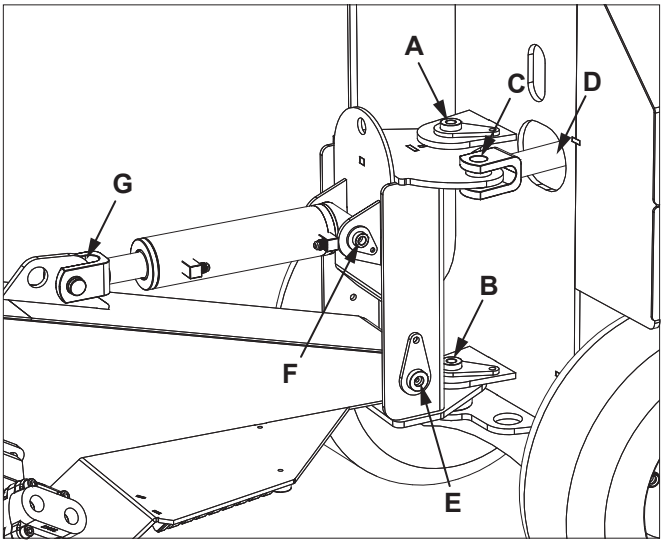

3. Lubricate axle king pins (H), tie rod pins (I) and steering cylinder pins (J) every 30 hours.

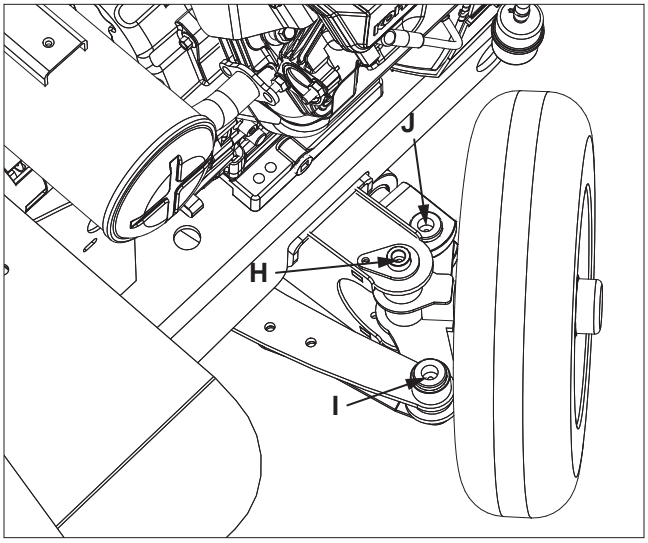

4. Lubricate axle pivot pin (K) every 30 hours.

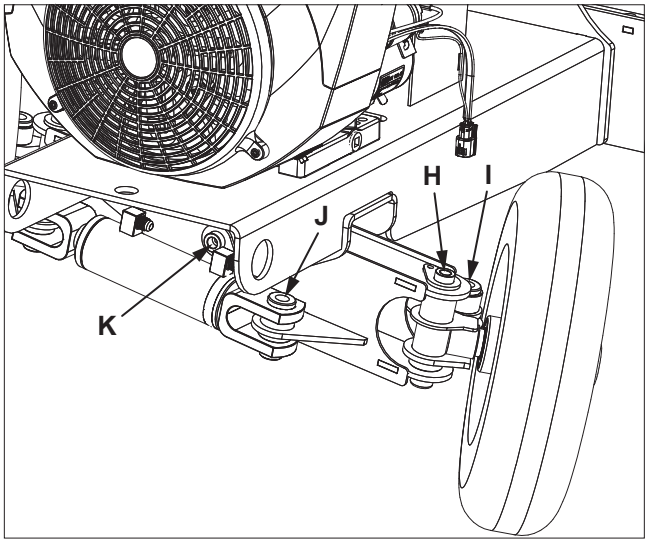

7 TROUBLESHOOTING

Problem	Probable Cause	Solution
Rotor does not spin.	Rotor jammed.	Lock out power and clear debris from rotor.
	Low hydraulic oil level.	Check hydraulic oil level. Add if necessary.
	Low hydraulic oil flow.	Have a qualified hydraulic technician check hydraulic oil flow.
Rotor rotates slow or sluggish.	Low hydraulic oil level.	Check hydraulic oil level. Add if necessary.
	Oil hydraulic filter plugged.	Replace hydraulic oil filter.
	Relief valve not set properly.	Have a qualified hydraulic technician set relief valve.
	Low hydraulic oil flow.	Have a qualified hydraulic technician check hydraulic oil flow.
Excessive vibration.	Insufficient hydraulic pressure.	Check hydraulic oil level. Add as needed.
	Debris lodged in rotor.	Lock out power and clear debris from rotor.
Smoke emitting from engine exhaust pipe.	Dirty or clogged engine air filter.	Change engine air filter.

8 STORAGE

8.1 Storing Stump Grinder

1. Store stump grinder in a dry place.
2. Clean stump grinder thoroughly. Dirt and wood chips will draw moisture and cause rust.
3. Check condition of cutting teeth. Replace as necessary. (See Service and Maintenance section.)
4. Check for loose or missing hardware.
5. Paint parts as necessary.

8.2 Remove Stump Grinder From Storage

1. Review Operator's Manual.
2. If parts have been replaced, verify they operate properly.

9 WARRANTY

To view the warranty, scan the QR Code below, or go to Baumalight.com. From the Support drop down, click on Support, then select Stump Grinders. Select Product Warranty.

For parts, specifications and the latest machine information please visit our website.

www.baumalight.com

MTB MFG INC.
CORPORATE HEADQUARTERS
4575 Powell Rd.,
Wallenstein, Ontario Canada
N0B 2S0
www.baumalight.com