

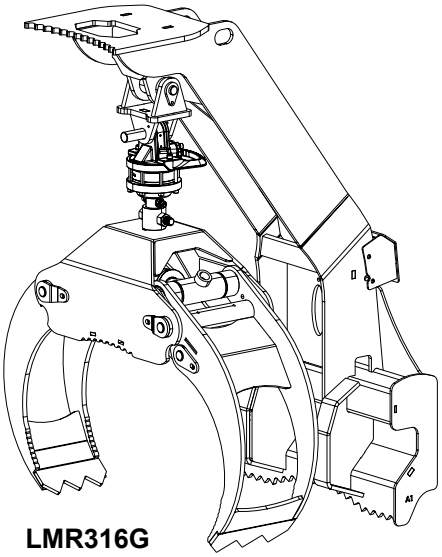


LMR316G

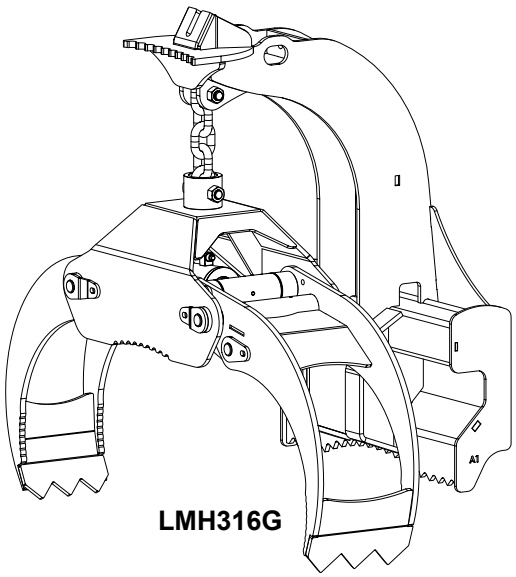


LMH316G

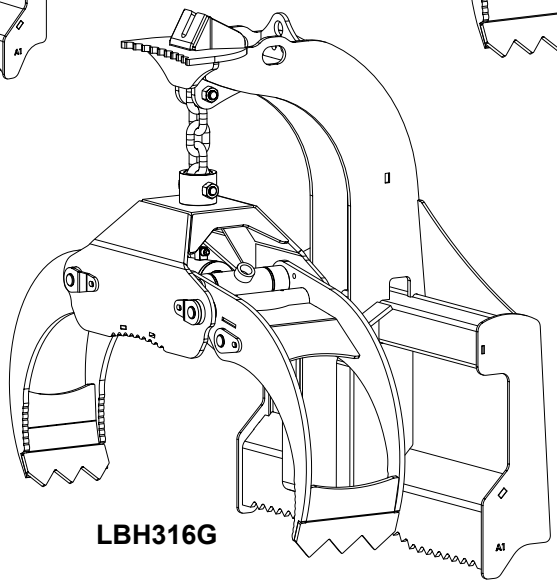

LBH316G

LMH316G, LBH316G And LMR316G
Log Grapple
OPERATOR'S MANUAL

Issue Date: November 2026

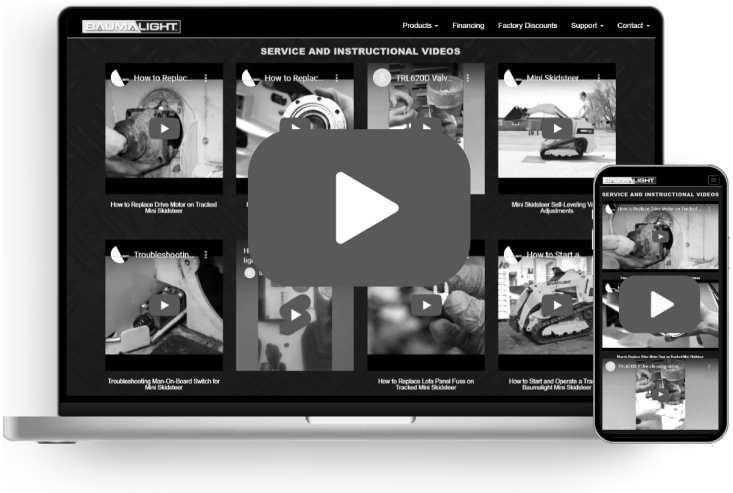

Service And Instructional Videos

Find online at baumalight.com/support

Following is a list of videos and documents available on Baumalights website and also on YouTube to help and enhance maintaining the log grapple. The list below was current at the time this manual was issued. Additional content may be available.

Activity ID Number	Activity Name	Description	Item Available
432	Hydraulic Cylinder.	Replacing Seals On Hydraulic Cylinder.	Video
471	Communicating Measurements.	Why Not To Send Pictures Of Measuring Tapes To Communicate Measurements.	Video
443	Inserting A Pin In An 8 And 14 Pin Connector.	Changing Pins In Aux Receptacle.	Video

TABLE OF CONTENTS

1 INTRODUCTION 4
1.1 Overview 4
1.2 Intended Use And Foreseeable Misuse 4
2 SAFETY 5
2.1 Safety Alert Symbol And Safety Words 5
2.2 Operational Hazards 5
Prepare For Emergencies 6
Replace Safety Signs 6
Do Not Allow Riders 7
Lower Operating Speed 7
Avoid Rollover 7
Avoid Loud Noise 7
Hazards From Modifying Equipment 7
Avoid High Pressure Fluids 7
2.3 Maintenance Hazards 8
Raised Log Grapple 8
3 SAFETY SIGNS 10
3.1 LMH316G And LBH316G 10
3.2 LMR316G 12
4 OPERATION 14
4.1 Preparation For Use 14
4.2 Components 14
4.3 Connect To Log Grapple 15
4.4 Transporting 16
4.5 Pre-Operation Check List 16
4.6 Operation 16
Slope Operation 16
General Operation 16
5 SERVICE AND MAINTENANCE 18
5.1 Maintenance 18
5.2 Inspections 18
5.3 Lubrication 18
6 TROUBLESHOOTING 20
7 STORAGE 21
7.1 Storing 21
7.2 Remove From Storage 21
8 WARRANTY 22

1 INTRODUCTION

1.1 Overview

Congratulations on your choice of a Baumalight Log Grapple. This equipment has been designed and manufactured to meet the needs of a discriminating buyer for efficient operation.

Safe, efficient and trouble free operation of your log grapple requires that you and anyone else who will be operating or maintaining the log grapple, read and understand this Operator's Manual.

This manual covers the LMH316G, LBH316G and LMR316G Log Grapple. Use the Table of Contents as a guide to locate required information.

Keep this manual handy for frequent reference and to pass on to new operators or owners. Contact your Baumalight dealer if you need assistance, information or additional copies of the manuals.

When this machine is worn out and no longer in use, it should be returned to the retailer or other party for recycling.

OPERATOR ORIENTATION - The directions left, right, front and rear, as mentioned throughout this manual, are as seen from the operator's platform and facing in the direction of travel.

1.2 Intended Use And Foreseeable Misuse

The log grapple is designed to be used by experienced operators, trained in the safe operation and hazards related to using the log grapple and the safe use of the log grapple for the intended purpose. Operators will require personal protective equipment to reduce the risk from some hazards that cannot be completely eliminated or controlled by the design of the log grapple.

The log grapple is not designed for use in hazardous atmospheres where there is a risk of fire or explosion due to flammable gases or vapors. Use in hazardous, explosive atmospheres is prohibited.

Serious injury or death of the operator or bystanders may be caused if the log grapple is misused.

2 SAFETY

2.1 Safety Alert Symbol And Safety Words

You must read, understand and follow the instructions given by the operating unit manufacturers, as well as the instructions in this manual.

The safety information in this manual is denoted by the safety alert symbol:



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

The level of risk is indicated by the following signal words:

⚠ DANGER

DANGER - Indicates a hazardous situation, which, if not avoided, WILL result in death or serious injury.

⚠ WARNING

WARNING - Indicates a hazardous situation, which, if not avoided, could result in death or serious injury.

⚠ CAUTION

CAUTION - Indicates a hazardous situation, which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE - Indicates a situation that could result in damage to the equipment or other property.

2.2 Operational Hazards

⚠ WARNING

Prevent death or serious injury.

Raised log grapple could fall, resulting in death or serious injury.

Never enter the area under raised log grapple.

⚠ WARNING

Prevent death or serious injury.

Read and understand this manual before operating the log grapple.

Never allow anyone near the log grapple during operation.

Travel at a safe speed.

⚠ WARNING

Prevent death or serious injury from moving parts.

Moving parts can crush and dismember.

Do not operate without guards and shields in place.

Disconnect and lockout power source before adjusting or servicing.

⚠ WARNING

Use log grapple only for the designed applications.

Any other use may result in personal injury, damage to equipment and may void the warranty.

⚠ WARNING

An overloaded log grapple or improperly distributed load can result in death or serious injury.

An overloaded log grapple can cause hydraulic system to malfunction, resulting in grapple falling.

A load that is improperly distributed in the log grapple can result in the machine tipping over when the log grapple is raised.

⚠ WARNING

A soft and/or uneven surface may cause the machine to overturn when the log grapple is raised.

Raise the log grapple only if the machine is on a firm and level surface.

Carefully read all safety messages in this manual and on equipment safety signs. Keep safety signs in good condition and replace missing or damaged safety signs.

New components and repair parts must include the current safety decal.

Learn how to properly operate the log grapple. NEVER operate or work around this equipment without proper instruction, while fatigued or under the influence of alcohol, prescription or non-prescription medication or if feeling ill.

Keep your equipment in proper working condition. Know the regulations and laws that apply to you and your industry. This manual is not to replace any regulations or laws. Additional information may be found at: www.asae.org or www.osha.gov.

If you do not understand any part of this manual, contact your Baumalight dealer.

Prepare For Emergencies

Be prepared in case of emergencies.

Keep a fire extinguisher and first aid kit close to the machine.

Keep emergency phone numbers in your phone.

Know your address so emergency services can locate you if an emergency arises.

Replace Safety Signs

Replace missing or damaged safety signs.

Safety signs are identified in Section 3 of this manual.

Replacement safety signs are available from your Baumalight dealer.

Do Not Allow Riders

NEVER lift or carry anyone on the log grapple.

NEVER use log grapple as a work platform.

NEVER allow passengers on the log grapple.

Lower Operating Speed

Move at slow speeds on rough or uneven terrain.

Avoid Rollover

The equipment may rollover, resulting in death or serious injury. To help prevent rollover:

- Travel at a slow speed.
- Avoid sharp turns & sudden movement on slopes.
- Avoid holes, ditches and other obstructions which may cause equipment to rollover.
- Use caution when operating on slopes and do not operate on excessively steep slopes.
- Do not exceed load capacity of equipment.

Avoid Loud Noise

⚠ WARNING

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Hazards From Modifying Equipment

Do not make any alterations to your log grapple. Altering the equipment may cause unsafe conditions and may void the manufacturer's warranty.

Avoid High Pressure Fluids

⚠ WARNING

Pressurized fluids can penetrate the skin.

Hydraulic hoses can fail from age, damage and exposure.

Use body and face protection while searching for leaks. A tiny, almost invisible leak can penetrate the skin, thereby requiring immediate medical attention.

Use wood or cardboard to detect hydraulic leaks, never use your hands.

Escaping fluid under pressure can penetrate the skin causing serious injury.

Prevent the hazard by relieving pressure before connecting or disconnecting hydraulic hoses. Verify all connections are tight before applying pressure.

Search for leaks with a piece of cardboard or wood.

Protect hands and body from high pressure fluids. If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or serious infection may result.

Raised Log Grapple

⚠ WARNING

Prevent death or serious injury.

Raised log grapple could fall, resulting in death or serious injury.

Never enter the area under raised log grapple.

Raised log grapple can lower unexpectedly, resulting in death or serious injury.

NEVER enter area under raised log grapple.

Lower log grapple, engage skid steer park brake, shut off engine and remove key before servicing.

2.3 Maintenance Hazards

Before servicing, park skid steer on a firm and level surface, engage park brake, remove key and place a “Do Not Operate” tag on control panel. Read and understand this manual.

If you do not understand any part of the manual, contact your Baumalight dealer.

Always wear face and/or eye protection, safety shoes, and other protective equipment appropriate for the job.

Do not make unauthorized modifications. Contact your Baumalight dealer before you weld, cut/drill holes, or make any other modifications.

⚠ WARNING

Moving parts can crush and cut.

Keep clear of moving components.

Follow lockout procedure before servicing.

⚠ WARNING

Entanglement hazard.

Keep clear of moving components.

Wear proper protective equipment appropriate for the job.

⚠ WARNING

Burn hazard.

Hot and high pressure hydraulic oil.

Allow oil to cool before servicing.

⚠ WARNING

Prevent death or serious injury.

Raised log grapple could fall, resulting in death or serious injury.


Never enter the area under raised log grapple.


3 SAFETY SIGNS

3.1 LMH316G And LBH316G


The two and four panel safety decals are pictorial and have a yellow background. The panel with a triangle indicates the potential hazard. The panel without a triangle indicates how to avoid the hazard.

If any of the decals are missing, are damaged, or if you do not understand the decal, please contact your dealer.

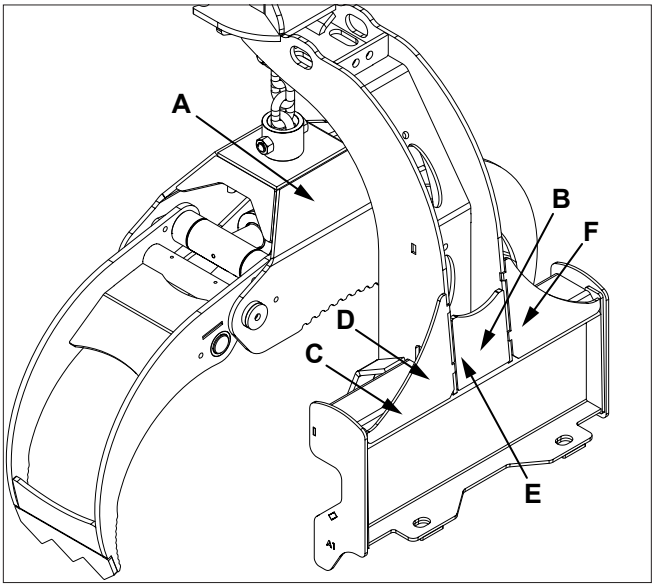


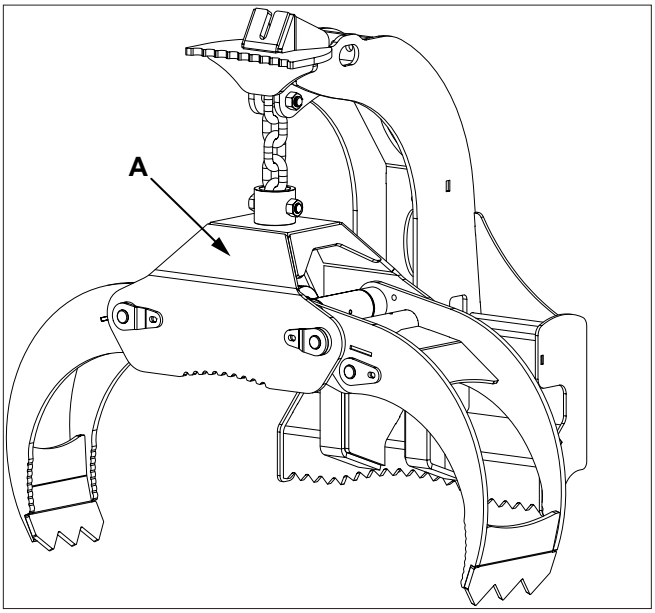

A. D005039 ⚠ WARNING - Pinch point / crush hazard. Do not reach into machine. Keep away from machine.

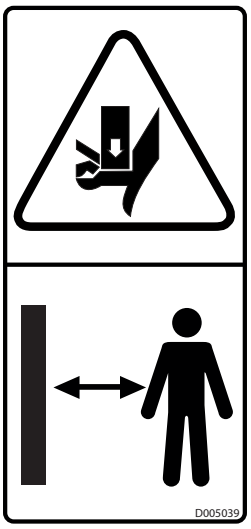

B. D005522 ⚠ WARNING - Remove key before performing service.

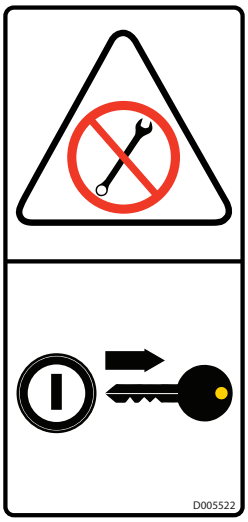

C. D005262 ⚠ WARNING - P65 warning information.


⚠ **WARNING:** This product can expose you to chemicals including 1,3-Butadiene and lead, which are known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

D005262

D. D005030 ⚠ WARNING - Pressurized fluid hazard. Keep away from machine.



E. D005029 ⚠ WARNING - Read and understand safety signs on the machine and operating instructions in this manual before operating machine.

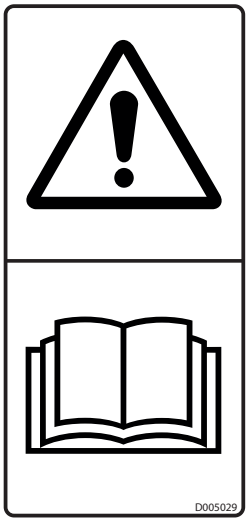


F. D005031 ⚠ WARNING - Wear personal protective equipment appropriate for the job.




3.2 LMR316G


The two and four panel safety decals are pictorial and have a yellow background. The panel with a triangle indicates the potential hazard. The panel without a triangle indicates how to avoid the hazard.

If any of the decals are missing, are damaged, or if you do not understand the decal, please contact your dealer.

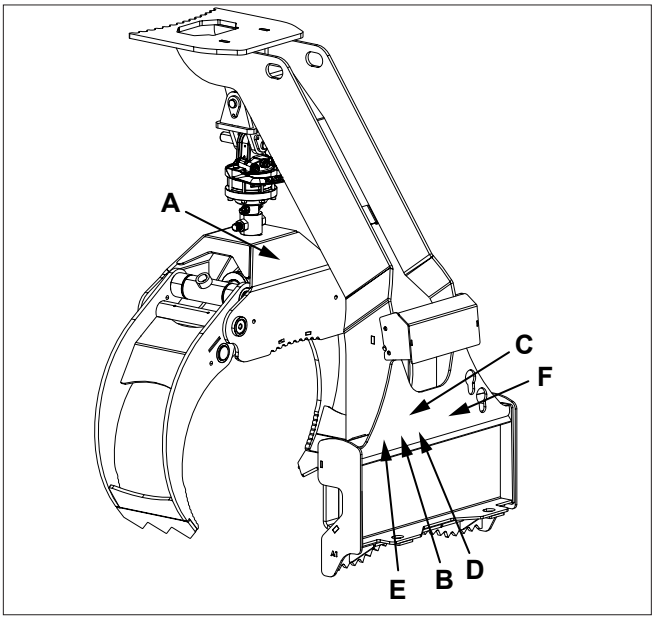


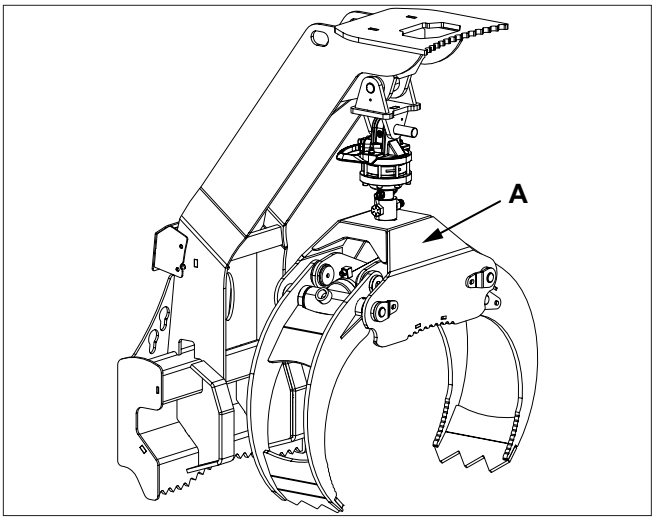

A. D005039 ⚠ WARNING - Pinch point / crush hazard. Do not reach into machine. Keep away from machine.

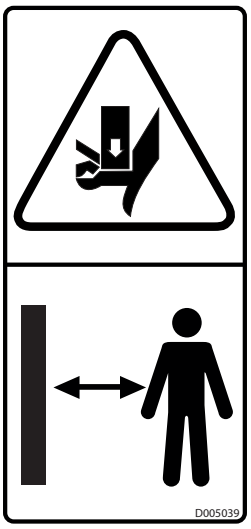

B. D005522 ⚠ WARNING - Remove key before performing service.

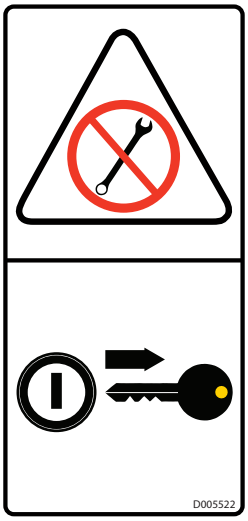

C. D005262 ⚠ WARNING - P65 warning information.


⚠ **WARNING:** This product can expose you to chemicals including 1,3-Butadiene and lead, which are known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

D005262

D. D005030 ⚠ WARNING - Pressurized fluid hazard. Keep away from machine.



E. D005029 ⚠ WARNING - Read and understand safety signs on the machine and operating instructions in this manual before operating machine.

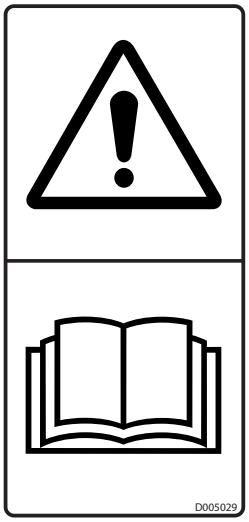

F. D005031 ⚠ WARNING - Wear personal protective equipment appropriate for the job.



4 OPERATION

4.1 Preparation For Use

Operator must be properly trained and understand operator's manual before using equipment. Do not allow untrained or unqualified people to operate this equipment.

Check all bolts for tightness and remove all shipping tags, bags, skids, and blocking.

Rotator (if equipped) and pivot points have been greased at the factory.

It is your responsibility to operate this equipment safely. You must be familiar with the equipment and all safety practices before use.

Inspect equipment before operating. Repair or replace any worn or damaged parts. Replace missing or damaged safety shields and safety signs.


Keep bystanders away from work area.

Always wear protective equipment appropriate for the job.

Do not operate, work on or around this machine while under the influence of alcohol, drugs or if feeling ill.

Keep clear of moving equipment at all times.

4.2 Components

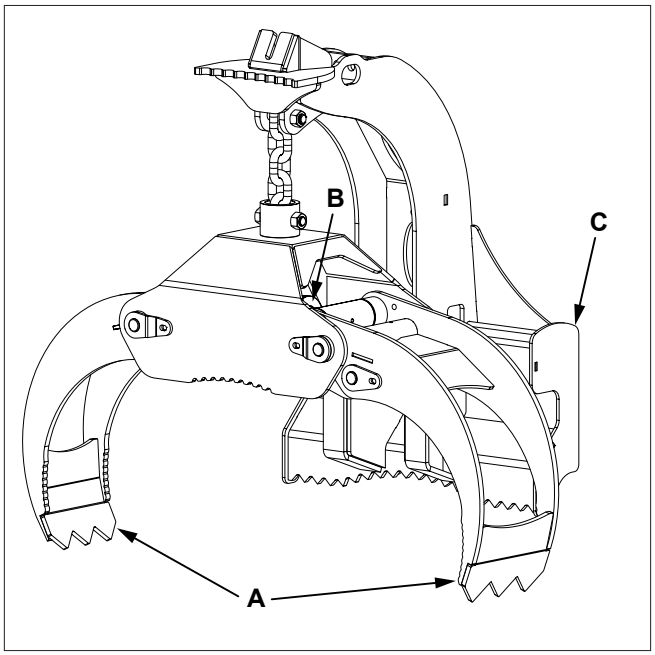

A. Grapple Jaws
B. Hydraulic Cylinder
C. Quick Attach

4.3 Connect To Log Grapple

⚠ WARNING

To prevent injury or machine damage put transmission in park.

Never position yourself between skid steer and grapple.


Only experienced and properly trained operator's should operate the skid steer and grapple.

⚠ WARNING

Pressurized fluids can penetrate the skin.

Disconnect and lockout power source before disconnecting and/or connecting hydraulic hoses.

1. Verify the mount plate and receiver plate are free of any dirt or debris and that the locking mechanism pins rotate freely. Lubricate locking mechanism if necessary.
2. Tilt carrier mounting plate (A) forward.
3. Position mounting plate into the upper lip (B) of the receiver plate.

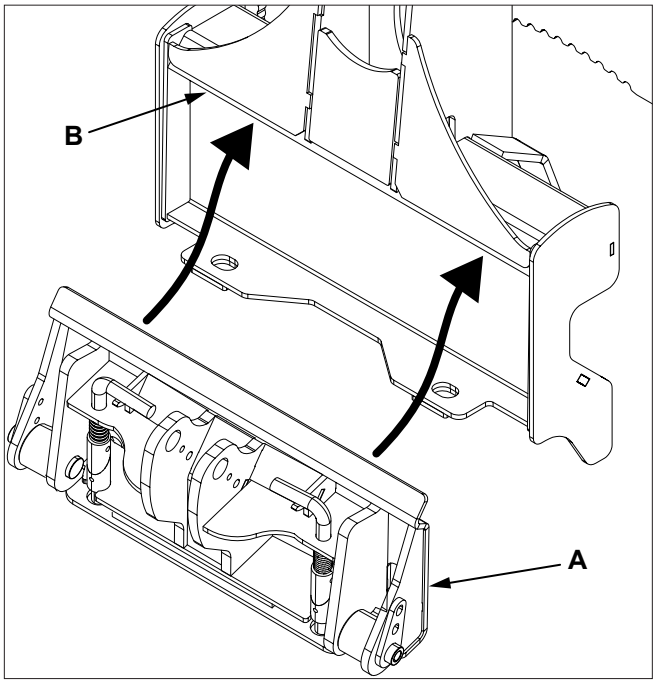

4. Raise carrier lift arms slightly while tilting mount plate back at the same time. The grapple should be raised enough to clear the ground and the mounting plate (A) should be tilted all the way back.
5. Stop carrier engine.
6. Engage mounting plate locking mechanism pins. Verify pins are fully seated through the receiver plate.

4.4 Transporting

1. Verify all reflectors and Slow Moving Vehicle (SMV) sign on carrier are visible.
2. Raise log grapple slightly off ground.
3. Verify hydraulics are disengaged.
4. Travel at a reasonable and safe speed.

4.5 Pre-Operation Check List

Verify that grapple is properly attached to skid steer.

Verify that hydraulic hoses are properly connected.

It is operators responsibility to perform the following checks prior to operation of equipment:

- Review and understand this manual and operating unit manual.
- Verify safety decals are installed and legible. Replace if damaged or missing.
- Verify that all hardware is tight.
- Inspect hoses and fittings for wear, damage and leaks. Replace damaged or leaking hoses before use.
- Refer to operating unit operator's manual for prestarting instructions.

4.6 Operation

Slope Operation

Watch for holes, ruts, or bumps.

Do not make sudden changes in speed or direction.


If the skid steer loses traction, slowly move straight down the slope. Avoid turning on slopes. If turning is necessary, turn slowly and keep the log grapple uphill.

Do not operate near drop off or ditches.

When parking on a hillside or slope, lower log grapple and engage skid steer park brake.


General Operation

1. Disengage skid steer park brake.
2. Operate hydraulics to open grapple jaws.

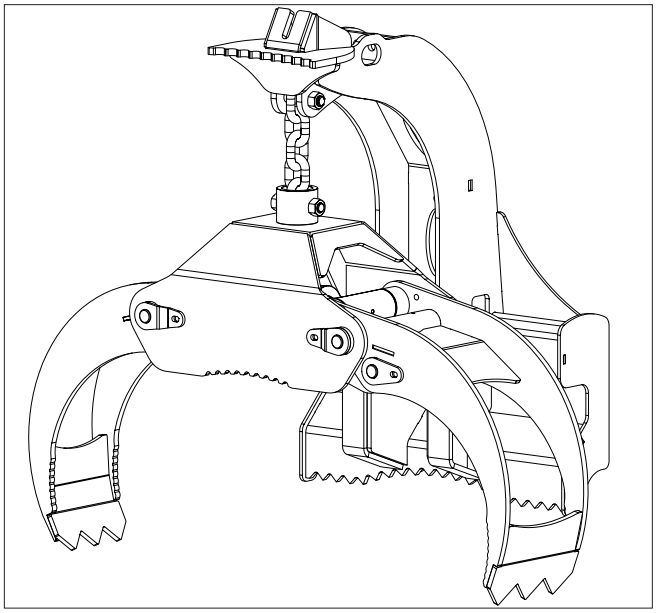


Grapple In Open Position

3. Tilt grapple forward and position over log.
4. Operate hydraulics to close grapple jaws around log.
5. Slightly raise grapple and tilt back so end of log is under grapple frame as shown.

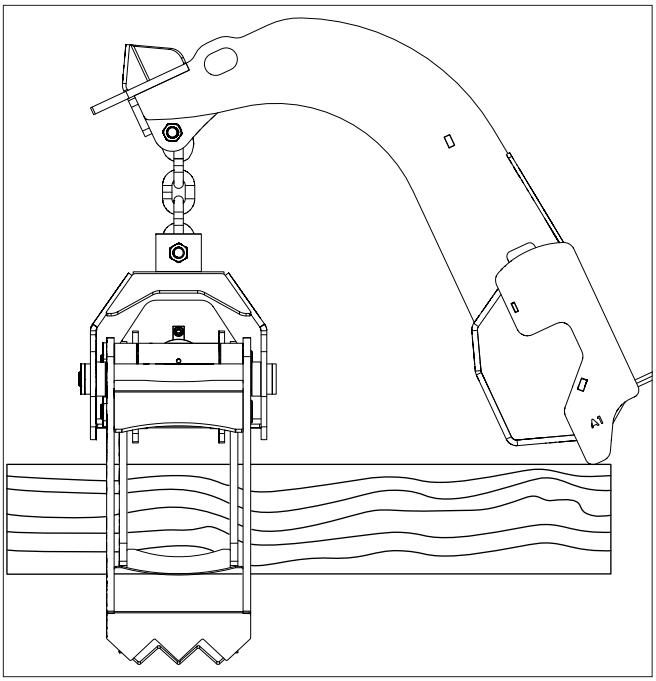

LMR316G - The grapple can rotate a full 360°. Operate hydraulics to rotate jaws as needed.

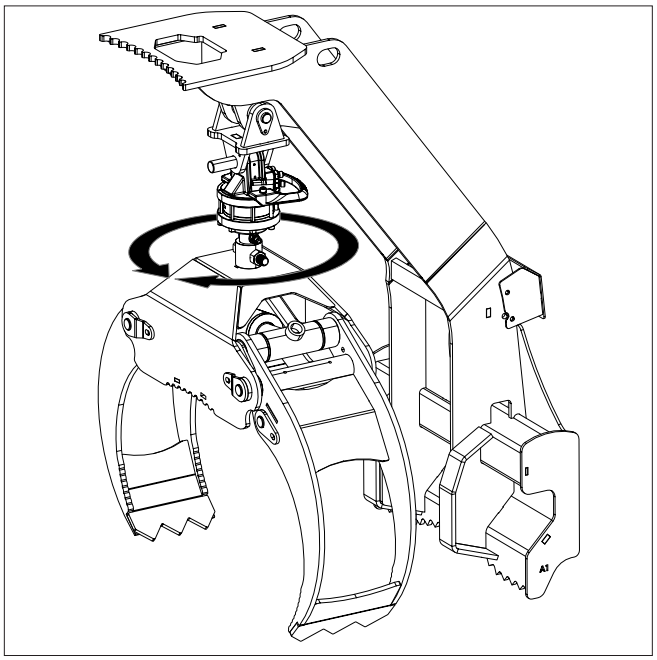

6. Carry log close to the ground and travel at a slow speed.

⚠ WARNING

Crush hazard.

Operation on a slope can result in machine tip over.

7. Position log in desired position.
8. Tilt grapple forward and operate hydraulics to open grapple jaws to release log.

5 SERVICE AND MAINTENANCE

5.1 Maintenance

⚠ WARNING

Moving parts can crush and cut.

Keep clear of moving components.

Lockout operating unit before performing inspections or maintenance.

We design many of our products using industry-standard parts that are widely available from local supply stores.

Many replacement parts such as bearings, belts, seals, touch-up paint and cutting teeth can often be found through local suppliers, not just from Baumalight.



5.2 Inspections

Lower log grapple, stop skid steer engine and remove key. Inspect log grapple for damage and worn parts. Repair or replace parts as needed.

Inspect hydraulic hoses going to the rotator every four hours. Replace hoses if worn or damaged.


Inspect hydraulic hoses and fittings daily for leaks. Replace if worn or damaged.

Inspect the unit for any damage. Repair or replace parts as needed.

5.3 Lubrication

5.3.1 Every 40 Hours


To reduce the contamination level of the oil in the rotator, work the rotator at least 20 full rotations clockwise.

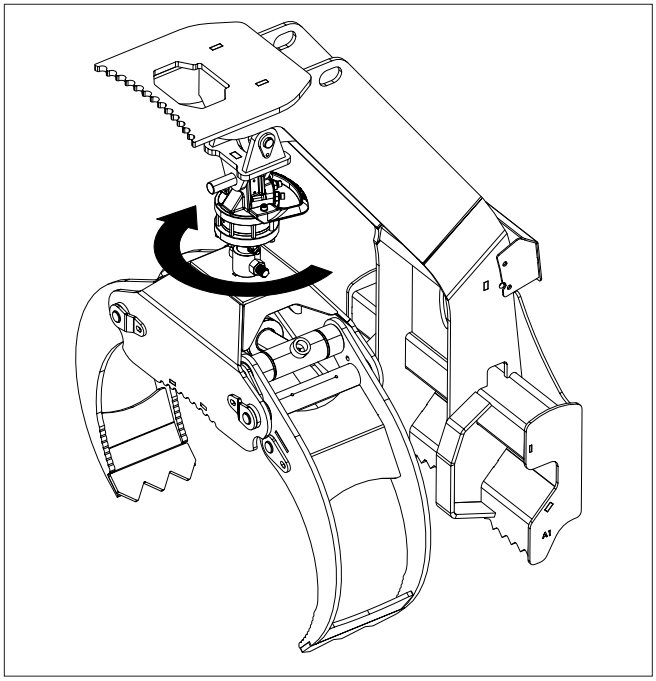



5.3.2 Every 100 Hours

Lower log grapple, stop skid steer engine and remove key.

Pump grease into pivot point grease fittings.

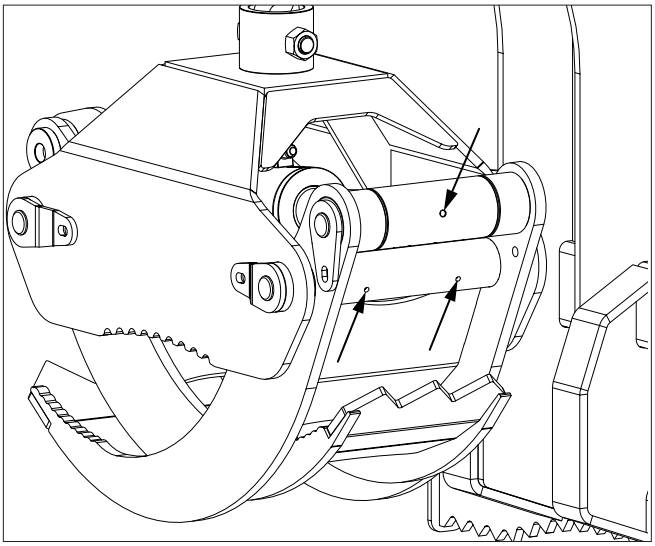

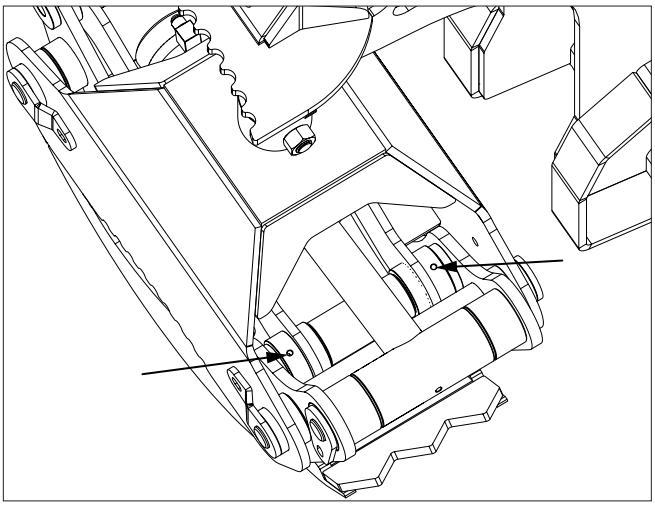


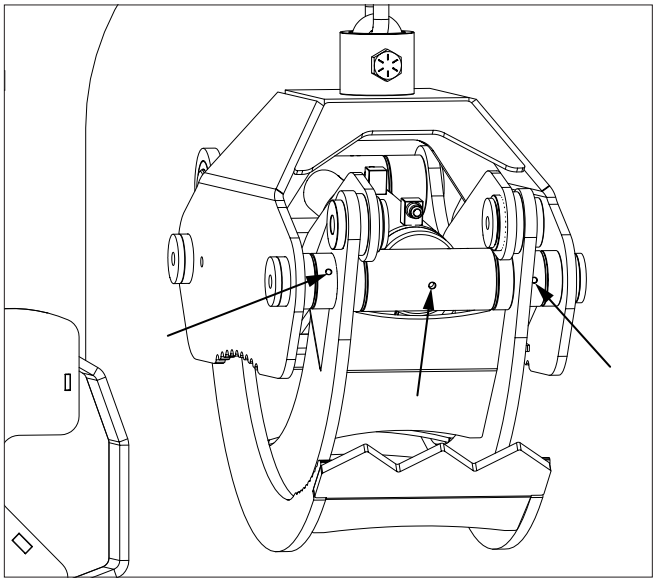

5.3.3 Every 400 Hours

Lower log grapple, stop skid steer engine and remove key.

Pump grease into rotator grease fitting.

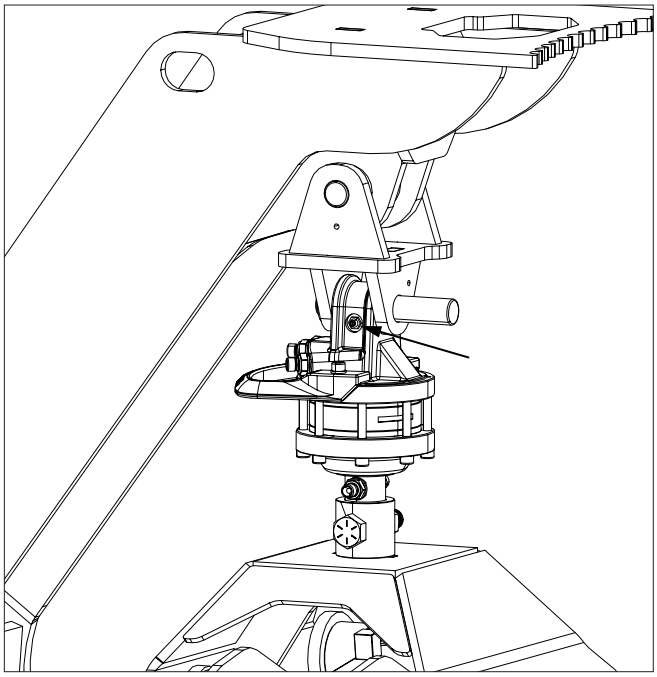

6 TROUBLESHOOTING

PROBLEM	CHECK	SOLUTION
Grapple does not close.	Grapple jammed.	Remove material from grapple.
	Low oil.	Check oil level in skid steer. Add if necessary.
	Not enough oil flow.	Check flow control on skid steer. See your dealer.
Grapple does not have much closing power.	Low oil.	Check oil level in skid steer. Add if necessary.
	Oil filter plugged.	Replace skid steer oil filter.
	Relief valve not set properly.	Set relief valve. Pressure should be between 2,500 and 3,500 psi.
	Not enough oil pressure.	Check hydraulic pressure on skid steer. See your dealer.

7 STORAGE

7.1 Storing

1. Store log grapple in a dry place.
2. Clean log grapple thoroughly. Dirt will draw moisture and cause rust.
3. Check for loose or missing hardware.
4. Paint parts as necessary.

7.2 Remove From Storage

1. Review Operator's Manual.
2. If parts have been replaced, verify they operate properly.

8 WARRANTY

To view the warranty, scan the QR Code below, or go to Baumalight.com. From the Support drop down, click on Support, then select Log Grapple. Select Product Warranty.

For parts, specifications and the latest machine information please visit our website.

www.baumalight.com

MTB MFG INC.
CORPORATE HEADQUARTERS
4575 Powell Rd.,
Wallenstein, Ontario Canada
N0B 2S0
www.baumalight.com