
TRL536D

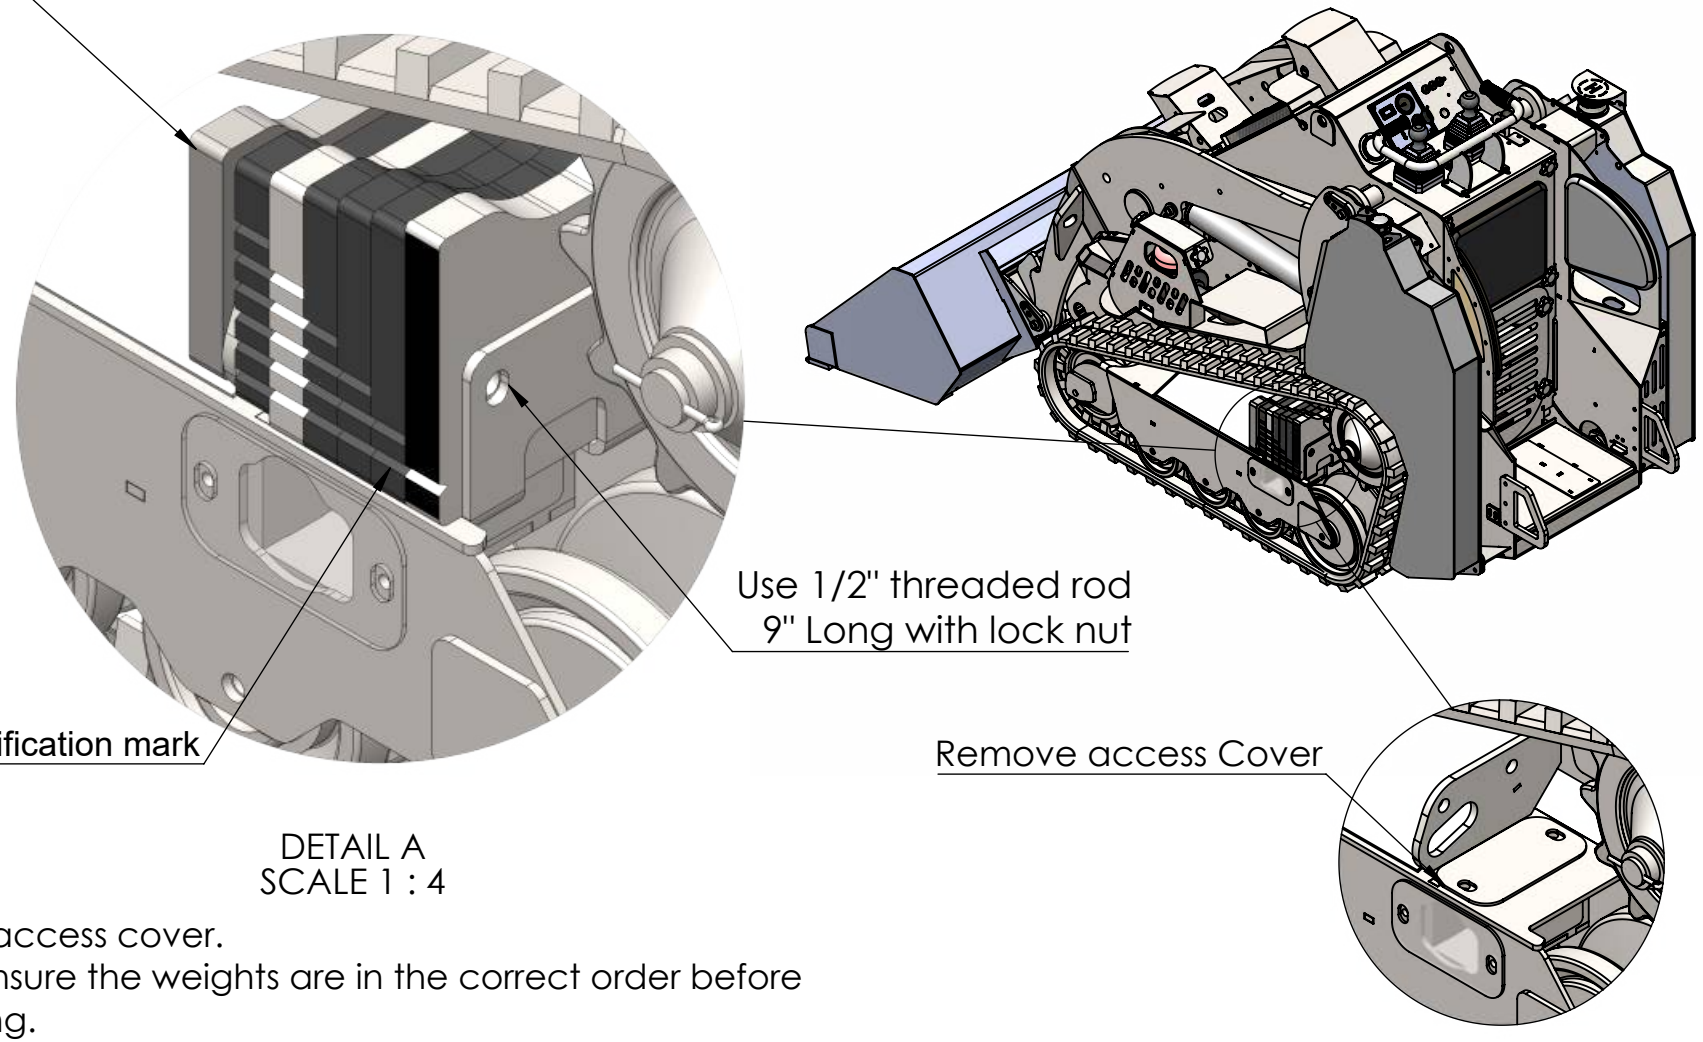

DETAIL A
SCALE 1 : 4

Notes:

1. Remove access cover.
2. Always ensure the weights are in the correct order before assembling.
3. Use the number of grooves on the side to identify the plates.
4. Assemble the weight kit in the order of identification from greatest number of grooves to least. The plate without an identification mark should be assembled first, as shown in the image.

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF BAUMALIGHT. ANY REPRODUCTION IN PART OR AS A WHOLEWITHOUT THE WRITTEN PERMISSION OF BAUMALIGHT IS PROHIBITED.

BAUMALIGHT™

Description	Tracked Radial Lift				
Weight lbs	Thickness in.	K-Factor	DATE 15-05-2024	DWG. NO. D007034	REV A
DO NOT SCALE DRAWING	SCALE: 1:20	SHEET 1 OF 1			

5 4 3 2 1